## C423

**14405**

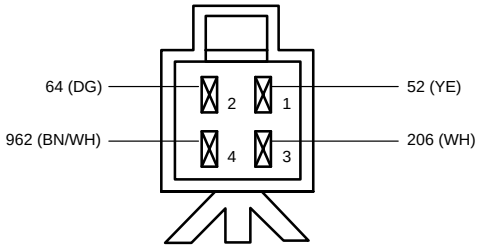


F04235

**13A576**

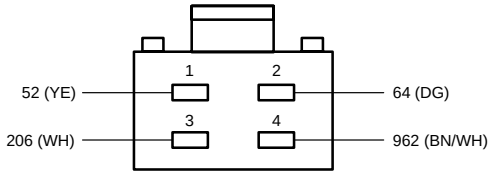


F04233

## C426

**14405**

B16
Wheel speed sensor, right rear

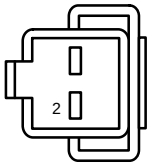


F02067

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 523 (RD/PK) | Wheel speed sensor, right rear + |
| 2 | 524 (PK/BK) | Wheel speed sensor, right rear – |

## C433 (BK)

**14405**

A31
Fuel tank unit
(9H307)

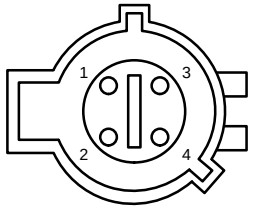


F04082

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 787 (PK/BK) | Fuel pump, Power |
| 2 | 29 (YE/WH) | Fuel pump/fuel gauge sender |
| 3 | 57 (BK) | Ground |
| 4 | 570 (BK/WH) | Ground |

## C435 (GY)

**14405**

B113
Fuel tank pressure transducer sensor
(9C968)

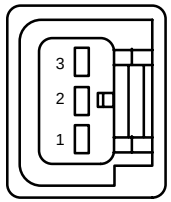


F03201

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 351 (BN/WH) | Reference, voltage |
| 2 | 89 (OG) | signal, return |
| 3 | 791 (RD/PK) | Fuel tank pressure transducer sensor (9C968) |

## C439

**13A576**

E201
Trailer tow connector (15A416)

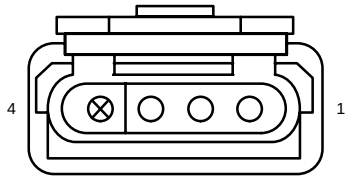


F04211

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 64 (DG) | Turn lamps, feed, right rear |
| 2 | 52 (YE) | Turn lamps, feed, left rear |
| 3 | 962 (BN/WH) | Park lamp relay, switched output |
| 4 | 206 (WH) | Trailer tow connector (15A416), Ground |