
27-21 ENGINE CONTROLS (7.3L DIESEL)

REVISED

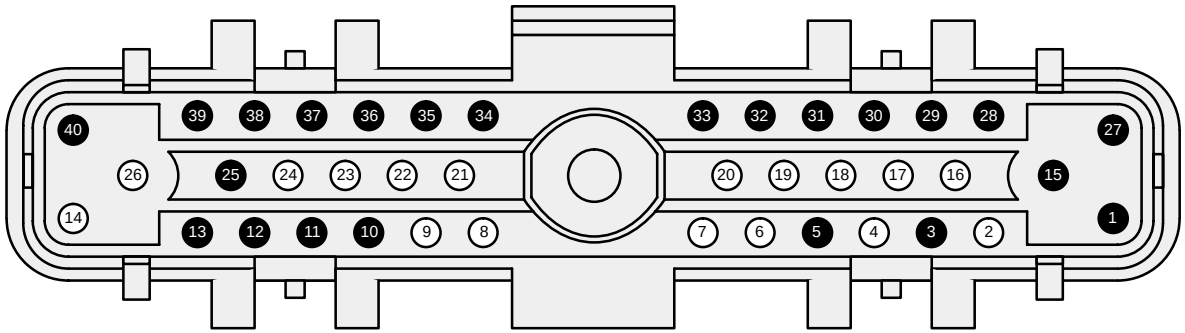

C128

INJECTOR DRIVER MODULE (IDM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	—	NOT USED	21	557 (BN/YE)	Fuel Injector #3 Switched Ground
2	359(GY/RD)	Signal Return	22	556 (WH)	Fuel Injector #2 Switched Ground
3	—	NOT USED	23	878 (PK/YE)	Fuel Injector Feed #2, 4, 6, 8
4	818 (GY/WH)	Electronic Feed Back Signal Output	24	1087 (OG)	Fuel Injector Feed #1, 3, 5, 7
5	—	NOT USED	25	—	NOT USED
6	555 (TN)	Fuel Injector #1 Switched Ground	26	574 (BK/PK)	Ground
7	558 (BN/LB)	Fuel Injector #4 Switched Ground	27	—	NOT USED
8	559 (TN/BK)	Fuel Injector #5 Switched Ground	28	—	NOT USED
9	562 (LB)	Fuel Injector #8 Switched Ground	29	—	NOT USED
10	—	NOT USED	30	—	NOT USED
11	—	NOT USED	31	—	NOT USED
12	—	NOT USED	32	—	NOT USED
13	—	NOT USED	33	—	NOT USED
14	876 (DG/LG)	Power Input	34	—	NOT USED
15	—	NOT USED	35	—	NOT USED
16	817 (YE/LB)	Cylinder Identification Signal Input	36	—	NOT USED
17	821 (BN/OG)	Fuel Delivery Command Signal Input	37	—	NOT USED
18	48	Injector Shield Ground	38	—	NOT USED
19	560 (LG/OG)	Fuel Injector #6 Switched Ground	39	—	NOT USED
20	561 (TN/RD)	Fuel Injector #7 Switched Ground	40	—	NOT USED