C278

14401

N82
Brake pedal position switch (13480)



F05111

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	810 (RD/LG)	Brake pedal position switch (13480), input
3	22 (LB/BK)	Voltage supplied at all times (overload protected)
4	511 (LG)	Brake pedal position switch (13480), to stoplamps
5	10 (LG/RD)	Voltage supplied at all times (overload protected)

C279

14401

N405
Transmission control switch



F02243

Pin	Circuit	Circuit function
1	298 (VT/OG)	Voltage in Run (overload protected)
2	224 (TN/WH)	Powertrain Control Module (PCM) (12A650), to transmission overdrive cancel switch

C281a

14401

A255
Four–wheel drive control module

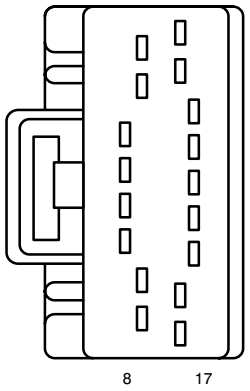

F17005

Pin	Circuit	Circuit function
1	931 (OG)	Voltage supplied at all times (overload protected)
2	704 (DG/LG)	Voltage supplied at all times (overload protected)
3	–	not used
4	70 (LB/WH)	ISO Bus
5	465 (WH/LB)	Four–wheel drive control module, to Four–wheel drive switch
6	–	not used
7	570 (BK)	Ground
	57 (BK)	Ground
8	778 (OG)	Four–wheel drive control module, to Transfer case assembly
9	1003 (GY/YE)	Voltage in Run (overload protected)
10	–	not used
11	771 (VT/YE)	Motor position 5
12	810 (RD/LG)	Brake pedal position switch (13480), input
13	–	not used
14	627 (BK/OG)	Door ajar indicator, monitor
15	770 (WH)	Motor position 4
16	463 (RD/WH)	Neutral, switch sense, input
17	777 (YE)	Four–wheel drive control module, to Transfer case assembly