C175e

12B637

Powertrain Control Module (PCM) (12A650)

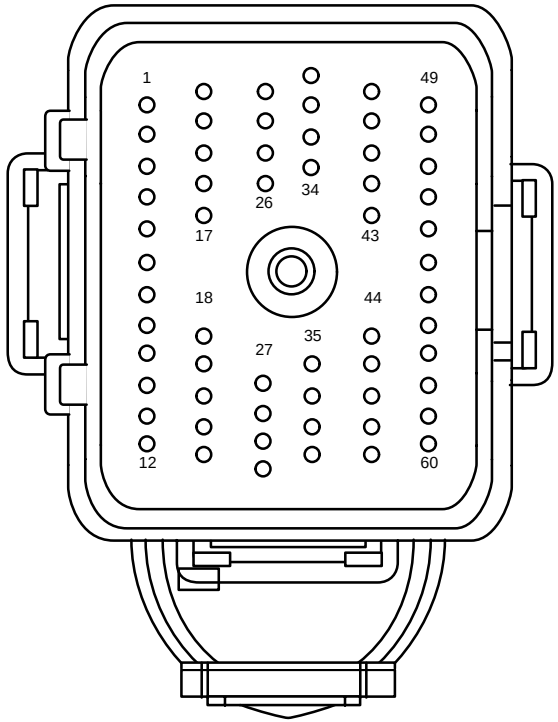

F60005

Pin	Circuit	Circuit function
1	8-RL27 (WH/BK)	Sensor signal
2	–	not used
3	–	not used
4	8-RJ12 (WH/BU)	Sensor signal
5	8-CE6 (WH)	Sensor signal
6	–	not used
7	91S-RJ14 (BN)	Ground, switch
8	91S-RJ15 (BN/RD)	Ground, switch
9	–	not used
10	–	not used

Pin	Circuit	Circuit function
11	91S-RL14 (BN/GN)	Ground, switch
12	91S-RR9 (BN/YE)	Ground, switch
13	8-RL26 (WH/VT)	Sensor signal
14	7-RN11 (YE/BK)	Voltage DC supplied at all times (sensor)
15	9-RJ28 (BN)	Sensor signal return (reference/ground)
16	91S-RL7 (BN/GN)	Ground, switch
17	9-RE1 (BN/GN)	Sensor signal return (reference/ground)
18	–	not used

Pin	Circuit	Circuit function
19	10-BA25 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
20	91S-RL11 (BN)	Ground, switch
21	91S-RL15 (BN/YE)	Ground, switch
22	91S-RR10 (BN/WH)	Ground, switch
23	8-RJ20 (WH/GN)	Sensor signal
24	7-RJ28 (YE)	Voltage DC supplied at all times (sensor)
25	–	not used
26	–	not used
27	33-RG3 (YE/BU)	Switched between: Battery voltage, Ground or Open
28	91S-RL12 (BN/WH)	Ground, switch
29	91S-RL16 (BN/WH)	Ground, switch
30	91S-RR11 (BN)	Ground, switch
31	–	not used
32	8-RJ28 (WH)	Sensor signal
33	–	not used
34	–	not used
35	32-RG3 (WH/BU)	Switched between: Battery voltage, Ground or Open
36	–	not used
37	91S-RL17 (BN)	Ground, switch
38	91S-RR12 (BN/RD)	Ground, switch
39	8-RJ26 (WH/GN)	Sensor signal
40	8-RJ33 (WH/VT)	Sensor signal
41	8-RJ7 (WH/BU)	Sensor signal

Pin	Circuit	Circuit function
42	10-RJ18 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
43	10-RJ19 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
44	8-RJ15 (WH/RD)	Sensor signal
45	8-RJ14 (WH)	Sensor signal
46	91S-RL13 (BN/YE)	Ground, switch
47	91S-RL10 (BN/WH)	Ground, switch
48	91S-RR8 (BN/GN)	Ground, switch
49	8-RJ11 (WH/GN)	Sensor signal
50	8-BA25 (WH/RD)	Sensor signal
51	8-RJ18 (WH/BK)	Sensor signal
52	8-RJ19 (WH/RD)	Sensor signal
53	8-RJ3 (WH/VT)	Sensor signal
54	8-RJ2 (WH/BK)	Sensor signal
55	10-RJ4 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
56	8-RJ4 (WH/RD)	Sensor signal
57	8-RJ39 (WH/RD)	Sensor signal
58	91S-RR5 (BN)	Ground, switch
55	91S-RR6 (BN/RD)	Ground, switch
56	91S-RR7 (BN/BU)	Ground, switch