C1051

14290

Fuel pump relay

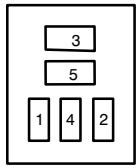

F05064

Pin	Circuit	Circuit function
1	1140 (VT)	Voltage supplied in Start and Run (overload protected)
2	926 (LB/OG)	Fuel pump relay, control
3	1059 (LB/OG)	Voltage supplied at all times (overload protected)
4	–	not used
5	238 (DG/YE)	Fuel pump relay, switched power, output

C1056

14290

High speed fan control relay

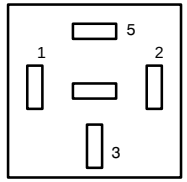

F05051

Pin	Circuit	Circuit function
1	639 (LG/VT)	High speed cooling fan relay, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)
3	38 (BK/OG)	Voltage supplied at all times (overload protected)
5	229 (RD/OG)	switched power, to, Engine cooling fan

C1058

14290

Low speed fan control relay

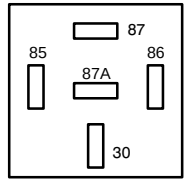

F05051

Pin	Circuit	Circuit function
30	38 (BK/OG)	Voltage supplied at all times (overload protected)
85	361 (RD)	Voltage supplied in Start and Run (overload protected)
86	228 (DB)	Low speed fan control relay, control
87	471 (OG/LG)	switched power, to, Engine cooling fan
87A	–	not used

C1059

14290

Rear wiper relay

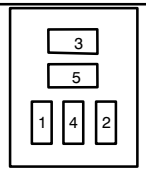

F05064

Pin	Circuit	Circuit function
1	1359 (DG/VT)	Rear wiper relay, control
2	406 (BN/WH)	Voltage supplied at all times (overload protected)
3	63 (RD)	Rear wiper relay, switched output
4	1205 (BK)	Ground
5	406 (BN/WH)	Voltage supplied at all times (overload protected)

C1064 (GY)

9D930

Engine Coolant Temperature (ECT) sensor (12A648)

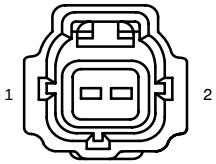

F02111

Pin	Circuit	Circuit function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
2	359 (GY/RD)	signal, return

C1065 (BK)

12B637

Ignition coil (12029)

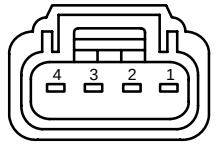

F04162

Pin	Circuit	Circuit function
1	526 (DB/LG)	PCM, to, Ignition coil (12029) – 1, 5
2	528 (PK/WH)	PCM, to, Ignition coil (12029) – 2, 6
3	527 (RD/LB)	PCM, to, Ignition coil (12029) – 3, 4
4	361 (RD)	Voltage supplied in Start and Run (overload protected)