C329

14B084

A223
Heated seat module, passenger side front

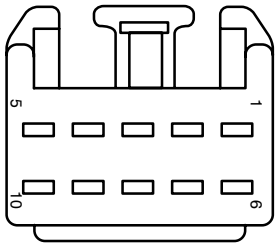

F10063

Pin	Circuit	Circuit function
1	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
2	581 (RD)	Seat heater switch, driver side, to, Heated seat module, driver side front
3	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
4	1153 (RD/BK)	Voltage supplied at all times (overload protected)
5	1067 (VT/LB)	Seat cushion heater, passenger side, heater, return
6	295 (LB/PK)	Voltage in Run (overload protected)
7	1060 (BK/LB)	Seat cushion heater, driver side, Sensor,feed
8	57 (BK)	Ground
9	–	not used
10	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, passenger side front

C334

14B084

N30
Seat cushion heater, right front

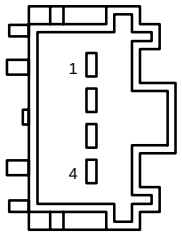

F04139

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
5	1066 (GY/LB	Seat back heater, driver side, feed

C335

14B084

N32
Seat back heater, right front

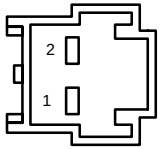

F02077

Pin	Circuit	Circuit function
1	1066 (GY/LB)	Seat back heater, driver side, feed
2	1067 (VT/LB)	Seat back heater, driver side, heater, return