95-9 TRAILER/CAMPER ADAPTER

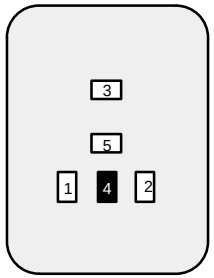

TRAILER RUNNING LAMP RELAY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	14 (BN)	Battery B(+) (Park or Head)
2	57 (BK)	Ground
3	962 (BN/WH)	Output
4	–	NOT USED
5	37 (YE)	Battery B(+)

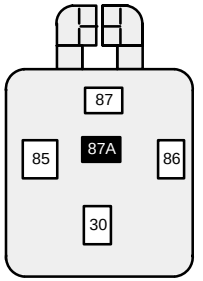

TRAILER BATTERY CHARGE RELAY

PIN	CIRCUIT	CIRCUIT FUNCTION
30	37 (YE)	Battery B(+)
85	57 (BK)	Ground
86	296 (WH/VT)	Ignition B(+) (Acc or Run)
87	49 (OG)	Output
87A	–	NOT USED

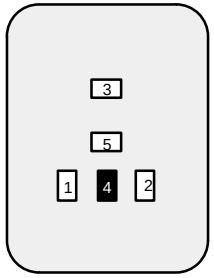

TRAILER REVERSING LAMP RELAY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	140 (BK/PK)	Reverse Input
2	57 (BK)	Ground
3	963 (BK/LG)	Output
4	–	NOT USED
5	37 (YE)	Battery B(+)

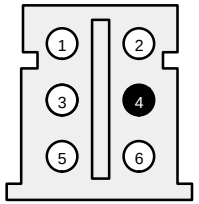

C244

TO ELECTRONIC BRAKE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	43 (DB)	Trailer Adapter (Class II)
2	57 (BK)	Ground
3	511 (LG)	Brake Pedal Position (BPP) Switch
4	–	NOT USED
5	22 (LB/BK)	Power (Hot at All Times)
6	14 (BN)	Power (Hot in Park and Head)