-43

C320

14401

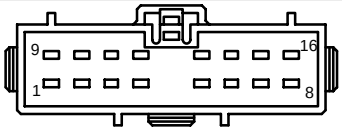

F16040

N120
Light switch

Pin	Circuit	Circuit Function
1	64-LE1 (BU)	Variable D.C. voltage (not overload protected)
2	15S-LD6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	15S-LD9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-LD1 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	15S-LE6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-LE14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	–	not used
6	15S-LE14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-LE14B + (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-LE19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
7	15-LD16 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched

Pin	Circuit	Circuit Function
8	15-LE29 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
9	29S-DA2 (OG/BU)	Voltage supplied at all times (overload protected), switched
10	31-LE29 (BK)	Ground
11	29-LE29 (OG/BK)	Voltage supplied at all times (overload protected)
12	30S-LE29 (RD/GN)	Voltage supplied at all times (not overload protected), switched
	30S-LE29A (RD/GN)	Voltage supplied at all times (not overload protected), switched
13	29S-LF1 (OG/YE)	Voltage supplied at all times (overload protected), switched
14	–	not used
15	15S-LE29 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
16	29S-LF21 (OG/BK)	Voltage supplied at all times (overload protected), switched
	29S-LF5 (OG/BU)	Voltage supplied at all times (overload protected), switched
	29S-LE18 (OG/YE)	Voltage supplied at all times (overload protected), switched

C375

M69
Recirculation air actuator

Pin	Circuit	Circuit Function
1	–	not used
2	32-FA76 (WH/BU)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	33-FA76 (YE/BU)	Switched between: Battery voltage, Ground or Open (Plus for: front up, close, mirror rightward, lock, off)