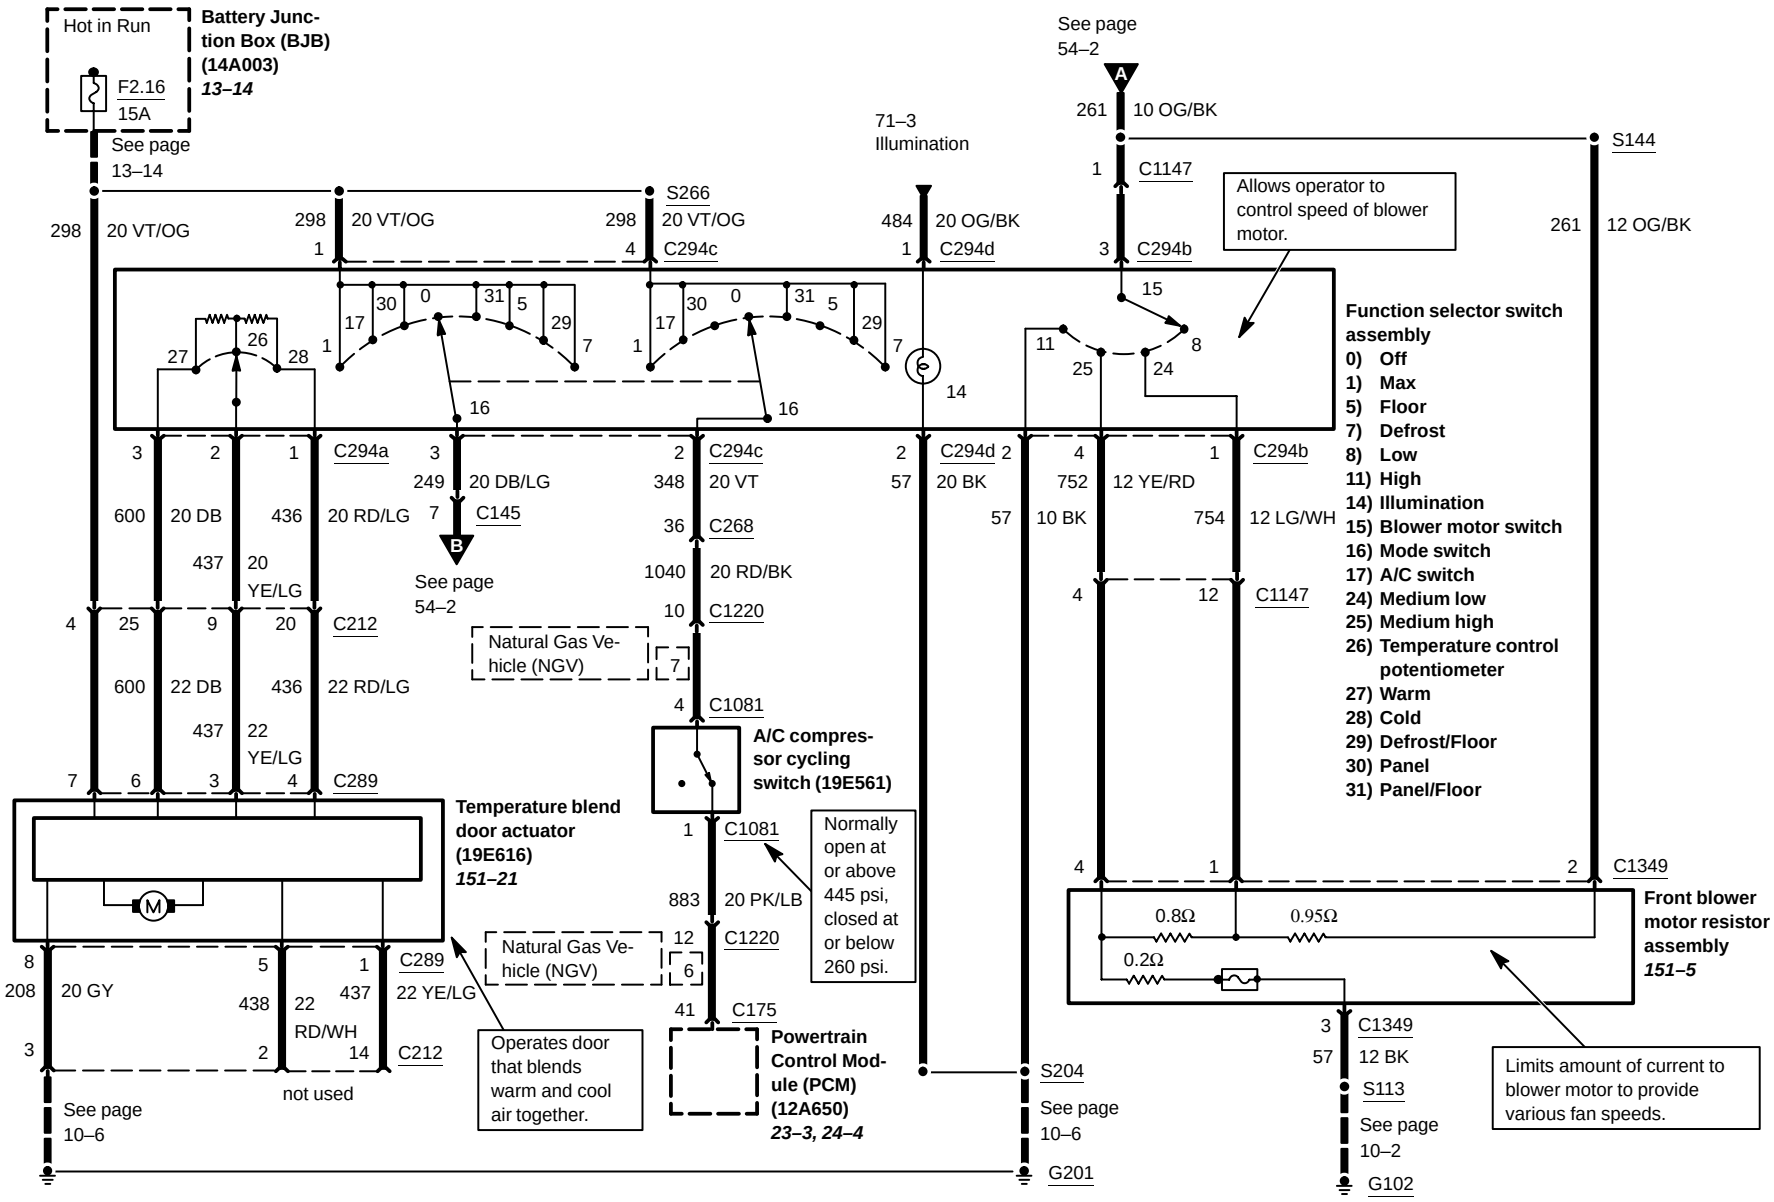
Hot in Run
F2.16
15A
Battery Junction Box (BJB) (14A003) 13–14
See page 13–14
298 20 VT/OG
S266
298 20 VT/OG
298 20 VT/OG
C294c
484 20 OG/BK
C294d
71–3 Illumination
See page 54–2
261 10 OG/BK
C1147
S144
261 12 OG/BK
Allows operator to control speed of blower motor.
Function selector switch assembly
0) Off
1) Max
5) Floor
7) Defrost
8) Low
11) High
14) Illumination
15) Blower motor switch
16) Mode switch
17) A/C switch
24) Medium low
25) Medium high
26) Temperature control potentiometer
27) Warm
28) Cold
29) Defrost/Floor
30) Panel
31) Panel/Floor
C294a
600 20 DB
436 20 RD/LG
437 20 YE/LG
C212
600 22 DB
436 22 RD/LG
437 22 YE/LG
C289
249 20 DB/LG
C145
See page 54–2
348 20 VT
C268
1040 20 RD/BK
C1220
Natural Gas Vehicle (NGV)
C1081
A/C compressor cycling switch (19E561)
883 20 PK/LB
Normally open at or above 445 psi, closed at or below 260 psi.
C175
Powertrain Control Module (PCM) (12A650) 23–3, 24–4
57 20 BK
57 10 BK
S204
See page 10–6
752 12 YE/RD
754 12 LG/WH
C1147
C1349
Front blower motor resistor assembly 151–5
0.8Ω
0.95Ω
0.2Ω
C1349
57 12 BK
S113
See page 10–2
G102
Limits amount of current to blower motor to provide various fan speeds.
Temperature blend door actuator (19E616) 151–21
208 20 GY
438 22 RD/WH
437 22 YE/LG
C289
C212
not used
See page 10–6
Operates door that blends warm and cool air together.
G201