C1168 (BK)

* 3.8L
** 3.8L, Mach 1
*** 4.6L 2V
† Mach 1

****7C078/*15525/**
*****12B637**

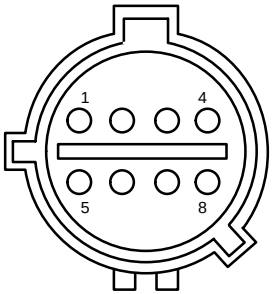

F08052

*****7C078/*9D930/**
*****15525/†12B637**

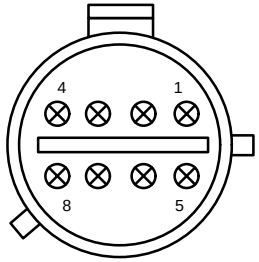

F08050

(1) 1145 (LB/BK)
(2) 1087 (OG)
(3) 389 (WH/BK)
(4) 390 (TN/YE)
(5) 393 (VT/LG)
(6) 392 (RD/LG)
(7) 1144 (YE/BK)
(8) 1143 (WH/BK)

C1182 (BK)

* 3.8L

***9D930**
12B637

Fuel injector 2
(9F593)

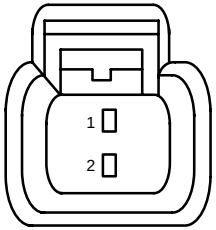

F02054

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1183 (BK)

* 3.8L

***9D930**
12B637

Fuel injector 3
(9F593)

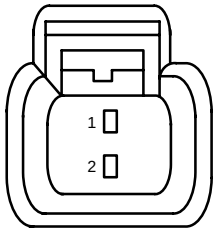

F02054

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1181 (BK)

* 3.8L
‡ Cobra

***9D930**
12B559
‡12B637

Fuel injector 1
(9F593)

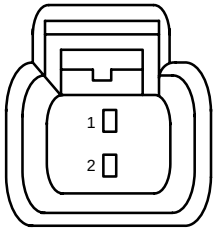

F02054

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1184 (BK)

* 3.8L

***9D930**
12B637

Fuel injector 4
(9F593)

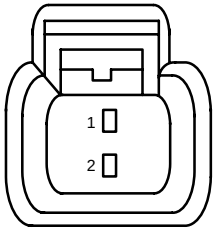

F02054

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)