63-5 INSTRUMENT CLUSTER (DIGITAL)

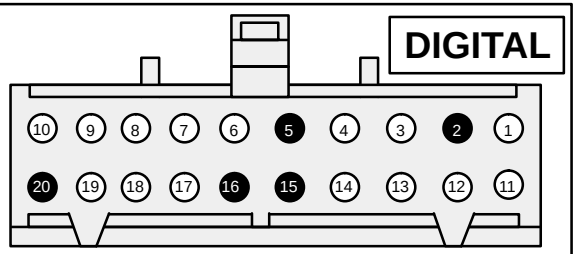

C255 (BLACK)

INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	506 (RD)	English Metric Output
2	–	NOT USED
3	143 (LB/YE)	Message Center Switch Assembly Input
4	39 (RD/WH)	Engine Coolant Temperature Sender Input
5	–	NOT USED
6	29 (YE/WH)	Fuel Level Input
7	54 (LG/YE)	B (+)
8	676 (PK/OG)	Power Ground
9	88 (BK/WH)	Power (Hot in Run)
10	82 (PK/YE)	Low Washer Fluid Input Door Ajar Input
11	205 (DB/LG)	Fuel Flow Rate Input
12	679 (GY/BK)	Vehicle Speed Sensor (VSS) Input (+)
13	19 (LB/RD)	Dim Display Input
14	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL) Input
15	–	NOT USED
16	–	NOT USED
17	344 (BK/YE)	Door Ajar Input
18	1270 (OG/RD)	Cylinder Head Temperature Indicator
19	183 (TN/YE)	Sound Tone Output
20	–	NOT USED

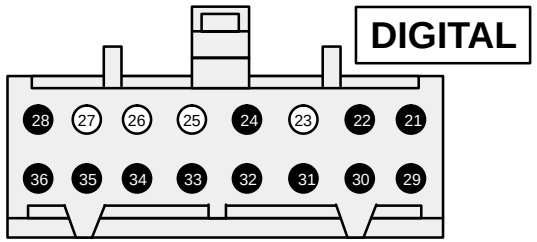

C254 (BLACK)

INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
21	–	NOT USED
22	–	NOT USED
23	152 (LB/WH)	Message Center Switch Assembly Input
24	–	NOT USED
25	419 (DG/LG)	Air Suspension Indicator Input (–)
26	203 (OG/LB)	Speed Control Engaged Input
27	486 (BN/WH)	Luggage Compartment Lid Open Warning Lamp Switch
28	–	NOT USED
29	–	NOT USED
30	–	NOT USED
31	–	NOT USED
32	–	NOT USED
33	–	NOT USED
34	–	NOT USED
35	–	NOT USED
36	–	NOT USED

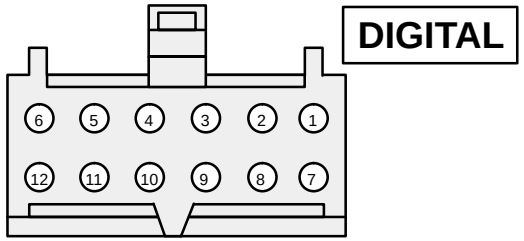

C256 (BLACK)

INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	676 (PK/OG)	Power Ground
2	88 (BK/WH)	Power (Hot in Run)
3	484 (OG/BK)	"PRNDL" Illumination Feed
4	12 (LG/BK)	HIGH Beam Input
5	2 (WH/LB)	Right Turn Signal Input
6	3 (LG/WH)	Left Turn Signal Input
7	88 (BK/WH)	Charge Indicator Input (+)
8	31 (WH/RD)	Engine Oil Pressure Indicator Input
9	658 (PK/LG)	Malfunction Indicator Lamp (MIL) Input
10	904 (LG/RD)	Charge Indicator Input (–)
11	450 (DG/LG)	Fasten Belts Input
12	939 (VT)	Traction Control Indicator