C2075

Accessory delay relay

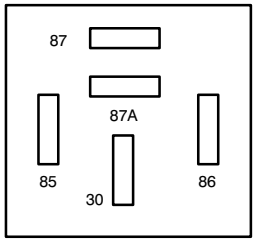

F05129

Pin	Circuit	Circuit function
30	–	Voltage supplied at all times (overload protected)
85	–	Accessory delay relay, control
86	–	Battery saver relay, switched output
87	–	Accessory delay relay, switched output
87a	–	not used

C2089 (BK)

14401

Adjustable pedal switch

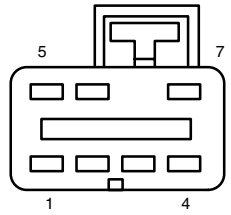

F07055

Pin	Circuit	Circuit function
1	1495 (WH)	Adjustable pedal motor (2C429) – Rearward
2	566 (DG)	Voltage supplied at all times (overload protected)
3	57 (BK)	Ground
4	57 (BK)	Ground
5	19 (LB/RD)	Instrument illumination, feed
6	57 (BK)	Ground
7	1494 (RD)	Adjustable pedal motor (2C429) – Forward