C243

19B113

A144
CD changer
(18D806)

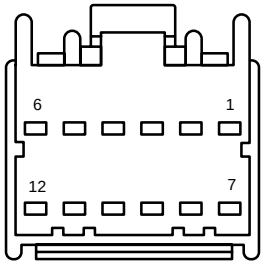

F12103

Pin	Circuit	Circuit function
1	832 (LB/PK)	Audio corporate protocol A
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	856 (VT)	Radio (18806), to CD changer, Left +
6	690 (GY)	Radio (18806), to CD changer, Right +
7	833 (TN)	Audio corporate protocol B
8	1068 (LG/BK)	Audio System ON (ASYSON)
9	797 (LG/VT)	Voltage supplied at all times (overload protected)
10	48	Shield
11	798 (LG/RD)	Radio (18806), to CD changer, Left –
12	799 (OG/BK)	Radio (18806), to CD changer, Right –

C248

14A005

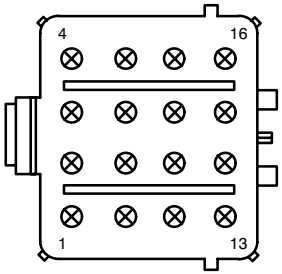

F16093

14401

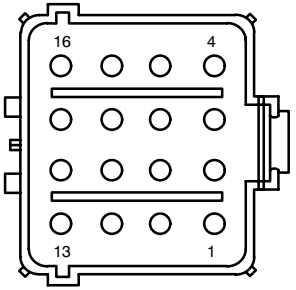

F16020

(1) 57 (BK)
(2) 640 (RD/YE)
(3) 999 (LB/WH)
(4) 140 (BK/PK)
(5) 3 (LG/WH)
(6) 827 (TN/WH)
800 (GY/LB)
(7) 875 (BK/LB)
(8) 162 (LG/RD)
(9) 1013 (BN/LG)
(10) 801 (TN/YE)
(11) 813 (LB/WH)
(12) –
(13) 344 (BK/YE)
(14) 956 (OG/LG)
(15) 804 (OG/LG)
(16) 70 (LB/WH)