Component Testing – Seat adjust switch, With side air bags

SCHEMATIC

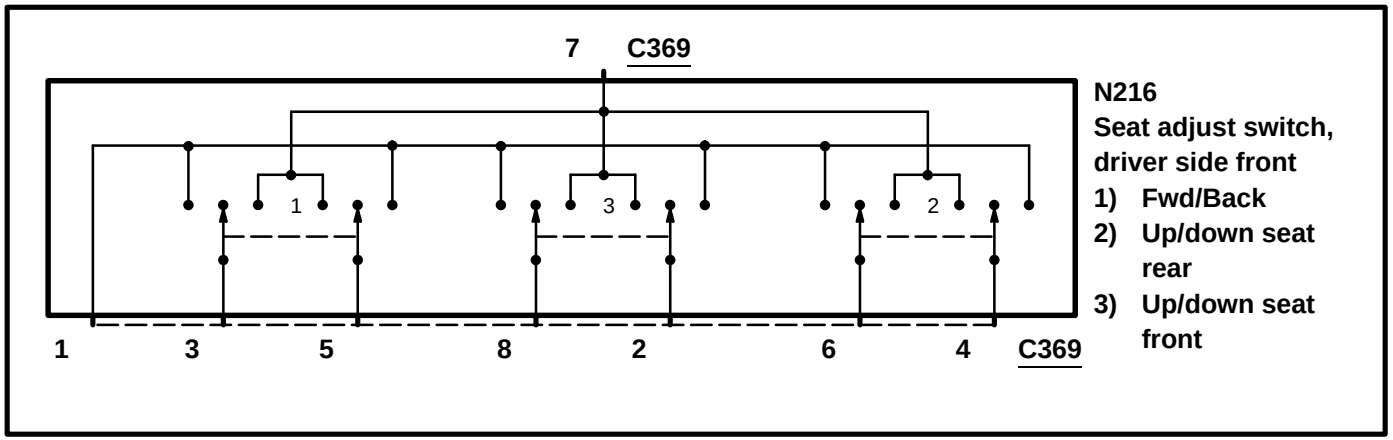

N216
Seat adjust switch, driver side front
1) **Fwd/Back**
2) **Up/down seat rear**
3) **Up/down seat front**

TERMINALS

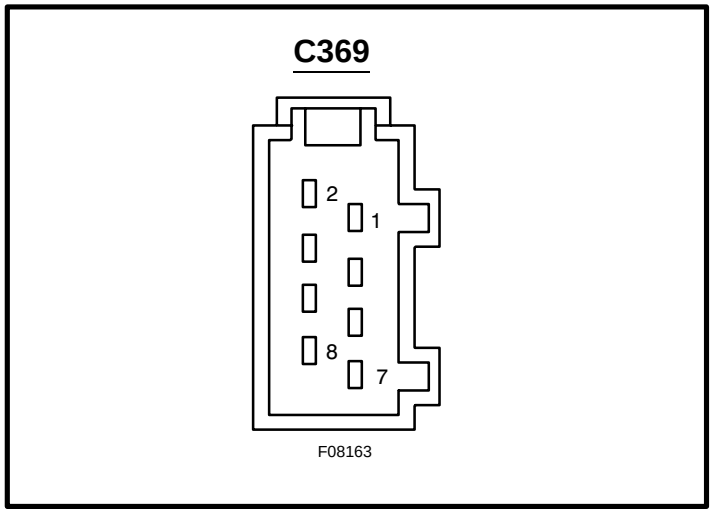

COMPONENT TESTING PROCEDURE

TO TEST	Connect Self-Powered Test Light or Ohmmeter to Terminals	Move Switch to These Positions	A Good Switch Will Indicate
Forward/ Rearward Circuit	7 and 3 5 and 1	Forward	Closed Circuit
		Rearward	Open Circuit
	7 and 5 3 and 1	Forward	Open Circuit
		Rearward	Closed Circuit
Front Up/Down Circuit	7 and 8 2 and 1	Up	Closed Circuit
		Down	Open Circuit
	7 and 2 8 and 1	Up	Closed Circuit
		Down	Open Circuit
Rear Up/Down Circuit	7 and 6 4 and 1	Up	Closed Circuit
		Down	Open Circuit
	7 and 4 6 and 1	Up	Closed Circuit
		Down	Open Circuit