C526b

14A005

N239
Door ajar switch, driver side front (14018)



F01167

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C526c

14A005

N239
Door ajar switch, driver side front (14018)

F01006

Pin	Circuit	Circuit function
1	465 (WH/LB)	Switch illumination, input

C528

14A005

A431
One–touch Down Module

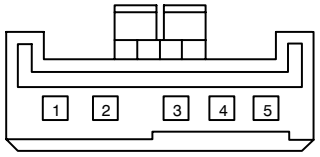

Pin	Circuit	Circuit function
1	227 (YE)	right front
2	407 (TN/BK)	Window motor
3	193 (YE/LG)	Voltage in Run or Accessory (overload protected)
4	226 (WH/BK)	right front
5	57 (BK)	Ground

C530

14A005

A244
Key pad switch assembly

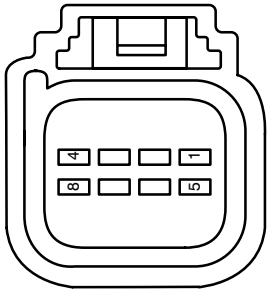

F08203

Pin	Circuit	Circuit function
1	78 (LB/YE)	Key pad button 1/2, output
2	66 (LB)	Key pad illumination
3	79 (LG/RD)	Key pad button 3/4, output
4	–	not used
5	57 (BK)	Ground
6	57 (BK)	Ground
7	121 (YE/BK)	Key pad button 5/6, output
8	–	not used

C534

14A005

N632
Luggage compartment lid release switch 1



F02185

Pin	Circuit	Circuit function
1	517 (BK/WH)	Voltage supplied at all times (overload protected)
	57 (BK)	Ground – with keyless entry
2	84 (VT/YE)	switched power
	26 (WH/PK)	Voltage supplied at all times (overload protected) – with keyless entry