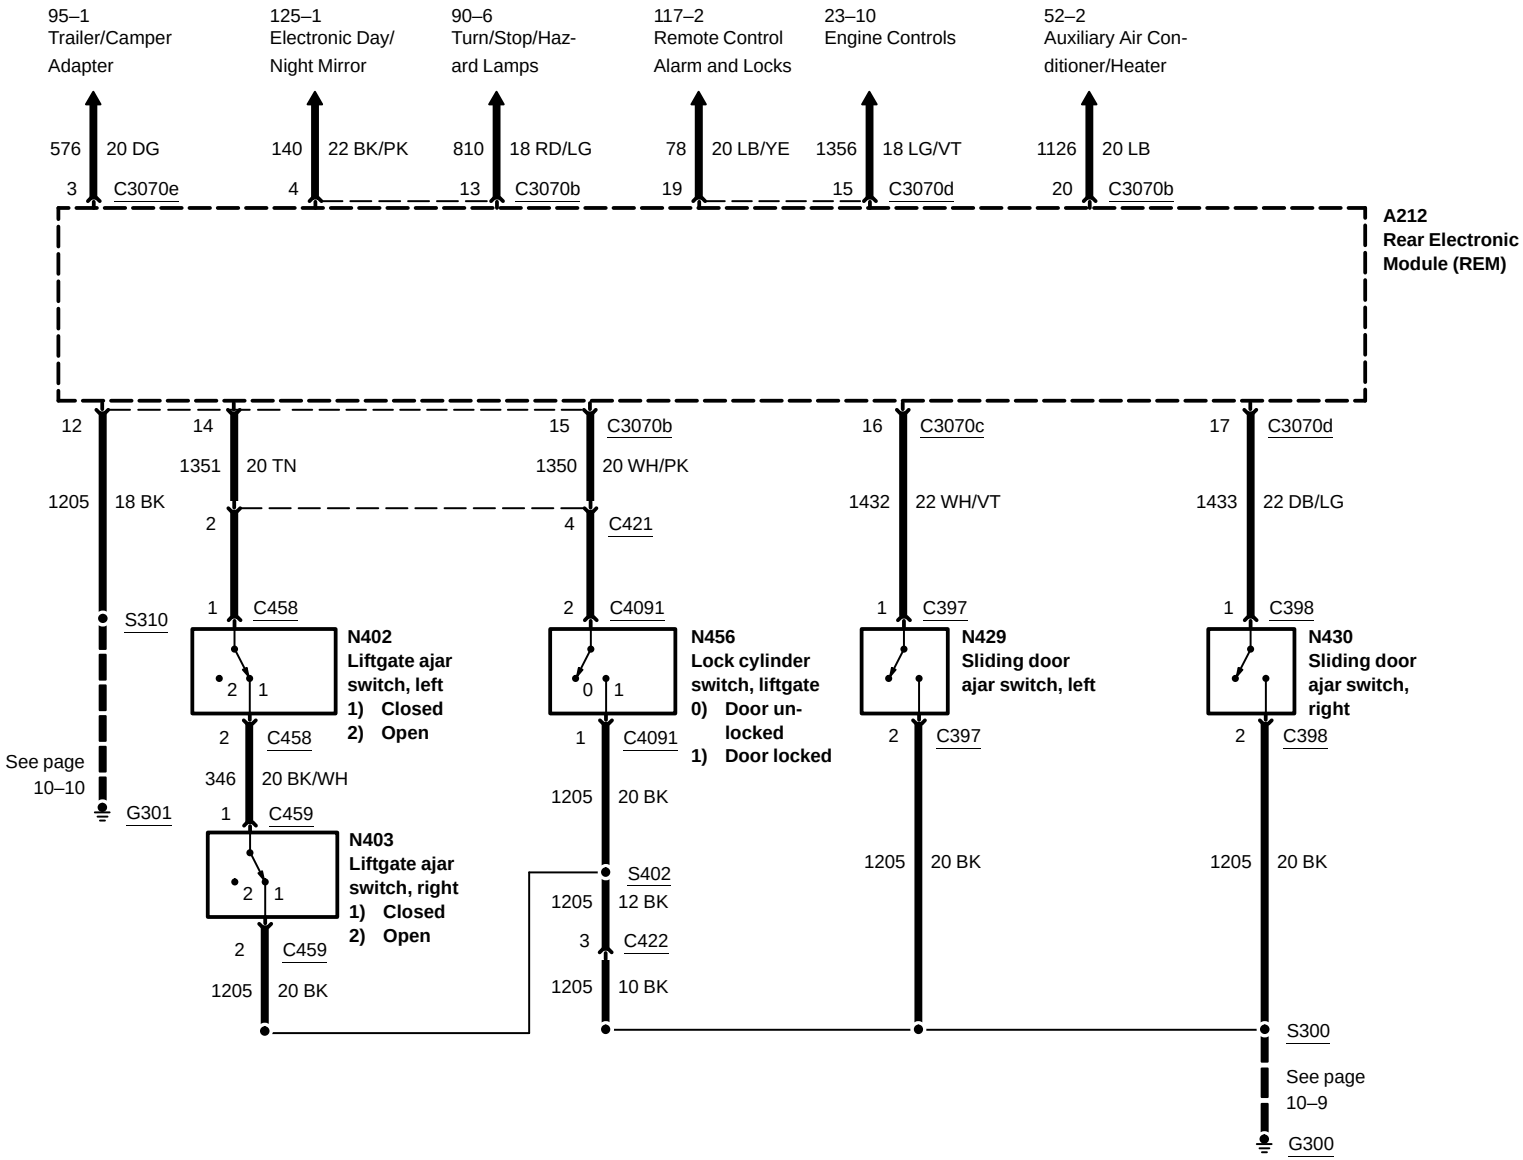
95–1
Trailer/Camper Adapter
125–1
Electronic Day/ Night Mirror
90–6
Turn/Stop/Hazard Lamps
117–2
Remote Control Alarm and Locks
23–10
Engine Controls
52–2
Auxiliary Air Conditioner/Heater
576 20 DG
3 C3070e
140 22 BK/PK
4
810 18 RD/LG
13 C3070b
78 20 LB/YE
19
1356 18 LG/VT
15 C3070d
1126 20 LB
20 C3070b
A212
Rear Electronic Module (REM)
12
1205 18 BK
S310
See page 10–10
G301
14
1351 20 TN
2
1 C458
N402
Liftgate ajar switch, left
1) Closed
2) Open
2 C458
346 20 BK/WH
1 C459
N403
Liftgate ajar switch, right
1) Closed
2) Open
2 C459
1205 20 BK
15 C3070b
1350 20 WH/PK
4 C421
2 C4091
N456
Lock cylinder switch, liftgate
0) Door unlocked
1) Door locked
1 C4091
1205 20 BK
S402
1205 12 BK
3 C422
1205 10 BK
16 C3070c
1432 22 WH/VT
1 C397
N429
Sliding door ajar switch, left
2 C397
1205 20 BK
17 C3070d
1433 22 DB/LG
1 C398
N430
Sliding door ajar switch, right
2 C398
1205 20 BK
S300
See page 10–9
G300