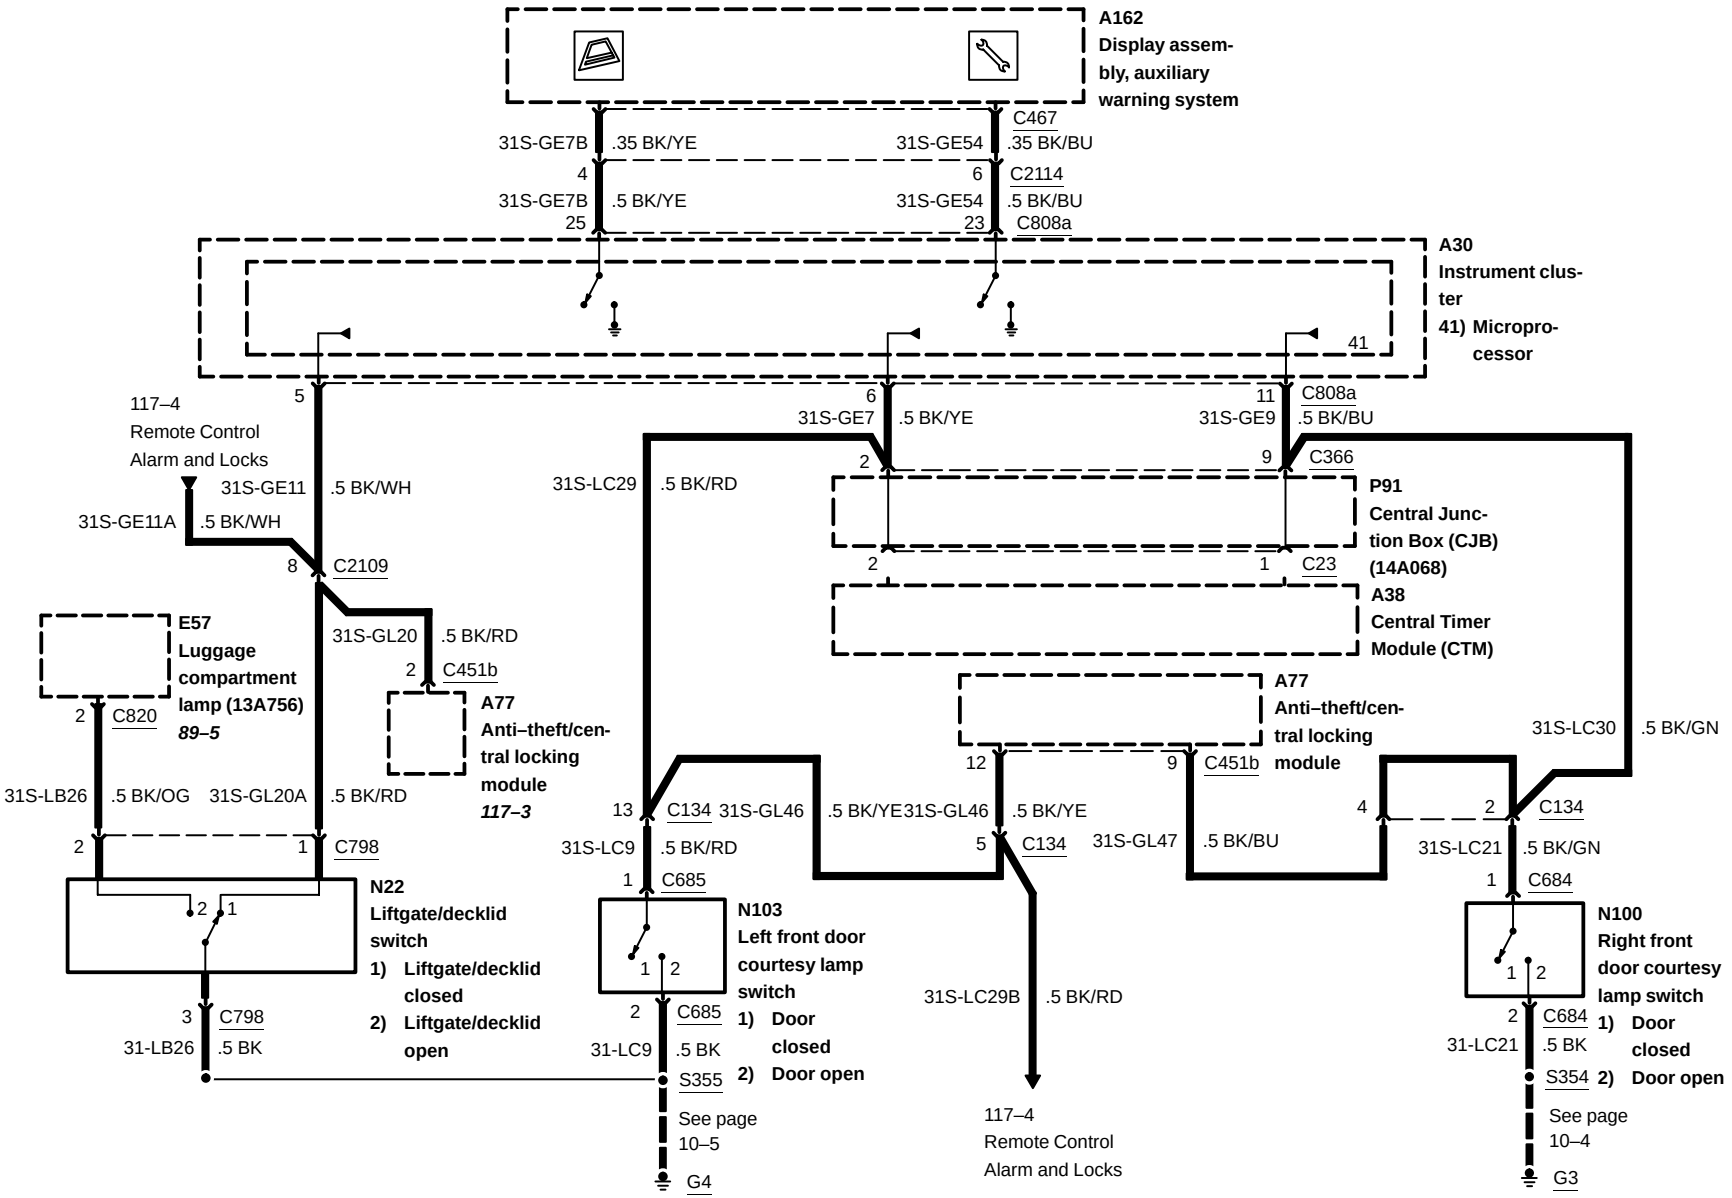
A162
Display assembly, auxiliary warning system
C467
31S-GE7B .35 BK/YE
31S-GE54 .35 BK/BU
4
6
C2114
31S-GE7B .5 BK/YE
31S-GE54 .5 BK/BU
25
23
C808a
A30
Instrument cluster
41) Microprocessor
41
5
6
11
C808a
117–4
Remote Control Alarm and Locks
31S-GE7 .5 BK/YE
31S-GE9 .5 BK/BU
9
C366
31S-GE11 .5 BK/WH
31S-LC29 .5 BK/RD
2
P91
Central Junction Box (CJB) (14A068)
31S-GE11A .5 BK/WH
8
C2109
2
1
C23
A38
Central Timer Module (CTM)
31S-GL20 .5 BK/RD
2
C451b
E57
Luggage compartment lamp (13A756)
89–5
A77
Anti–theft/central locking module
12
9
C451b
2
C820
31S-LB26 .5 BK/OG
31S-GL20A .5 BK/RD
117–3
13
C134
31S-GL46 .5 BK/YE
31S-GL46 .5 BK/YE
31S-LC30 .5 BK/GN
4
2
C134
2
1
C798
31S-LC9 .5 BK/RD
5
C134
31S-GL47 .5 BK/BU
31S-LC21 .5 BK/GN
1
C685
1
C684
N22
Liftgate/decklid switch
1) Liftgate/decklid closed
2) Liftgate/decklid open
N103
Left front door courtesy lamp switch
1) Door closed
2) Door open
N100
Right front door courtesy lamp switch
1) Door closed
2) Door open
3
C798
31-LB26 .5 BK
2
C685
31-LC9 .5 BK
S355
See page 10–5
G4
31S-LC29B .5 BK/RD
117–4
Remote Control Alarm and Locks
2
C684
31-LC21 .5 BK
S354
See page 10–4
G3