C4197

14A005

Trunk pull–
down module

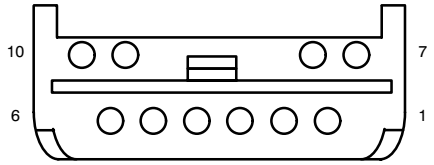

F10009

Pin	Circuit	Circuit function
1	26 (WH/VT)	Lighting control module
2	1605 (VT/WH)	Luggage compartment lid switch – Up
3	486 (BN/WH)	Unlock
4	–	not used
5	57 (BK)	Ground
6	1190 (YE/BK)	Voltage supplied at all times (overload protected)
7	1603 (RD/LG)	Luggage compartment lid closing motor – Down
8	1604 (VT/OG)	Luggage compartment lid switch – Down
9	–	not used
10	1601 (WH/PK)	Luggage compartment lid closing motor – Up

C4200a (NA)

14A005

Luggage
compartment
lid motor

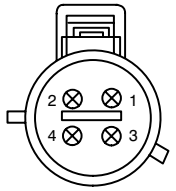

F04327

Pin	Circuit	Circuit function
1	1616 (OG/LG)	Sensor –
2	1615 (WH/YE)	Sensor +
3	1617 (WH/LG)	signal 1
4	1618 (WH/BK)	signal 2

C4200b (BK)

14A005

Luggage
compartment
lid motor

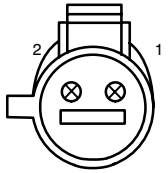

F02208

Pin	Circuit	Circuit function
1	1609 (LG/YE)	clutch +
2	1610 (WH/LB)	clutch –

C4200c (NA)

14A005

Luggage
compartment
lid motor

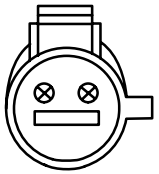

F02575

Pin	Circuit	Circuit function
1	1602 (WH/OG)	Luggage compartment lid motor +/–
2	1600 (TN/RD)	Luggage compartment lid motor +/–