C802 (BK)

14632

Speaker, right rear (18808)

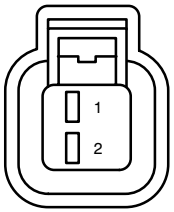

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C803 (BK)

14632

Power window motor, right rear (23394)

F02623

Pin	Circuit	Circuit function
1	882 (BN/YE)	Window switch to, Window motor, right rear
2	881 (BN)	Window switch to, Window motor, right rear

C804 (GY)

14632

Door lock actuator, right rear (218A42)

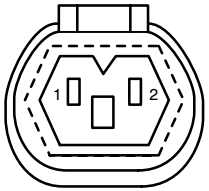

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C820a (GY)

14632

Door ajar switch, passenger side rear (14018)

F01065

Pin	Circuit	Circuit function
1	760 (PK/LB)	Door ajar switch, right rear

C820b (BK)

14632

Door ajar switch, passenger side rear (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C904 (BK)

13B472

High mounted stoplamp (13A613)

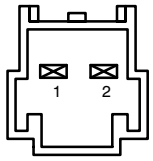

F02077

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	511 (LG)	Brake pedal position switch (13480), to stoplamps