C972

15A404

E267
Roof marker lamp, center

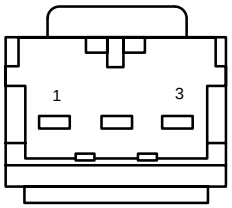

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C973

15A404

E268
Roof marker lamp, right center

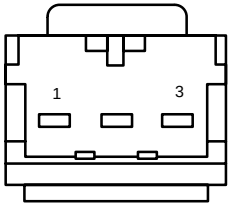

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C974

15A404

E17
Roof marker lamp, right

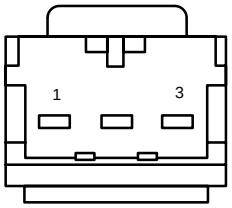

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C976

14334

A307
Video display, left

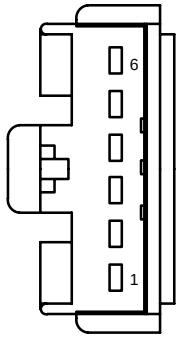

F06086

Pin	Circuit	Circuit function
1	137 (YE/BK)	Voltage in Run or Accessory (overload protected)
2	–	not used
3	57 (BK)	Ground
4	48	Shield
5	1540 (WH/LB)	Navigation display unit (10E899), Ground
6	1541 (OG/LB)	Vehicle Speed Sensor (VSS), to, Audio/navigation control unit, output