C350

7A786

A257
Transfer case assembly

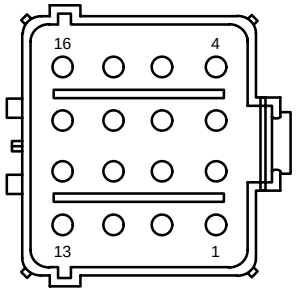

F16020

Pin	Circuit	Circuit function
1	764 (BN/WH)	Motor position 2
	770 (WH)	Motor position 3
2	772 (LB)	Four–wheel drive control module, to, Transfer case speed sensor, rear
3	774 (LG)	Sensor, voltage
4	236 (BK/LG)	Four–wheel drive control module, to, Transfer case speed sensor, front
5	763 (OG/WH)	Motor position 1
	771 (VT/YE)	Motor position 4
6	359 (GY/RD)	signal, return
7	774 (LG)	Sensor, voltage
8	359 (GY/RD)	signal, return
9	770 (WH)	Motor position 3
	764 (BN/WH)	Motor position 2
10	762 (YE/WH)	Motor position 6, Ground
11	975 (BN/YE)	clutch, Coil, return
	976 (OG)	clutch, Coil, return
12	–	not used
13	771 (VT/YE)	Motor position 4
	763 (OG/WH)	Motor position 1
14	778 (OG)	motor, control, clockwise rotation
15	777 (YE)	motor, control, clockwise rotation
16	779 (BN)	Four–wheel drive control module to Differential lock solenoid

C352

14C719

N421
Power seat switch, left

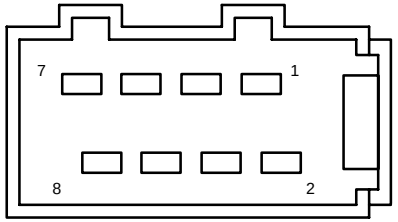

F08114

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	979 (RD/LB)	Front height motor, Up
	978 (YE/LB)	Front height motor, Up
3	980 (YE/WH)	Fwd/Rwd motor, Rearward
	981 (RD/WH)	Fwd/Rwd motor, Rearward
4	982 (YE/LG)	Rear height motor, Down
5	981 (RD/WH)	Fwd/Rwd motor, Forward
	980 (YE/WH)	Fwd/Rwd motor, Forward
6	983 (RD/LG)	Rear height motor, Up
	988 (YE/LG)	Rear height motor, Up
7	490 (RD)	Voltage supplied at all times (overload protected)
8	990 (YE/LB)	Front height motor, Down
	979 (RD/LB)	Front height motor, Down