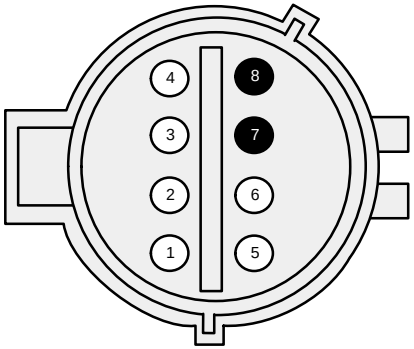

C129

RIGHT FRONT LIGHTING ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	12 (LG/BK)	High Beam Input
2	5 (OG/LB)	Right Turn/Stop/Hazard Lamp Indicator Lamp
3	379 (BN/WH)	Right Turn Signal Switch to Cornering Lamp
4	57 (BK)	Ground
5	1058 (BN/WH)	Right Side Park Lamps
6	161 (DG/OG)	Right Low Beam Input
7	–	NOT USED
8	–	NOT USED

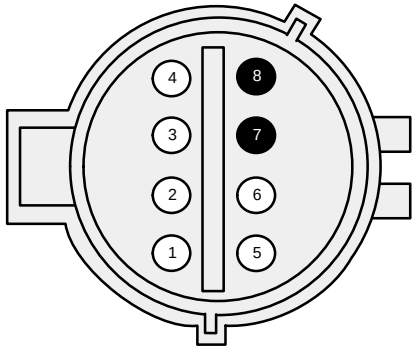

C137

LEFT FRONT LIGHTING ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	12 (LG/BK)	High Beam Input
2	9 (LG/OG)	Left Turn/Stop/Hazard Lamp Indicator Lamp
3	380 (VT/YE)	Left Turn Signal Switch to Cornering Lamp
4	57 (BK)	Ground
5	1057 (OG/BK)	Left Side Park Lamps
6	160 (DB/WH)	Left Low Beam Input
7	–	NOT USED
8	–	NOT USED