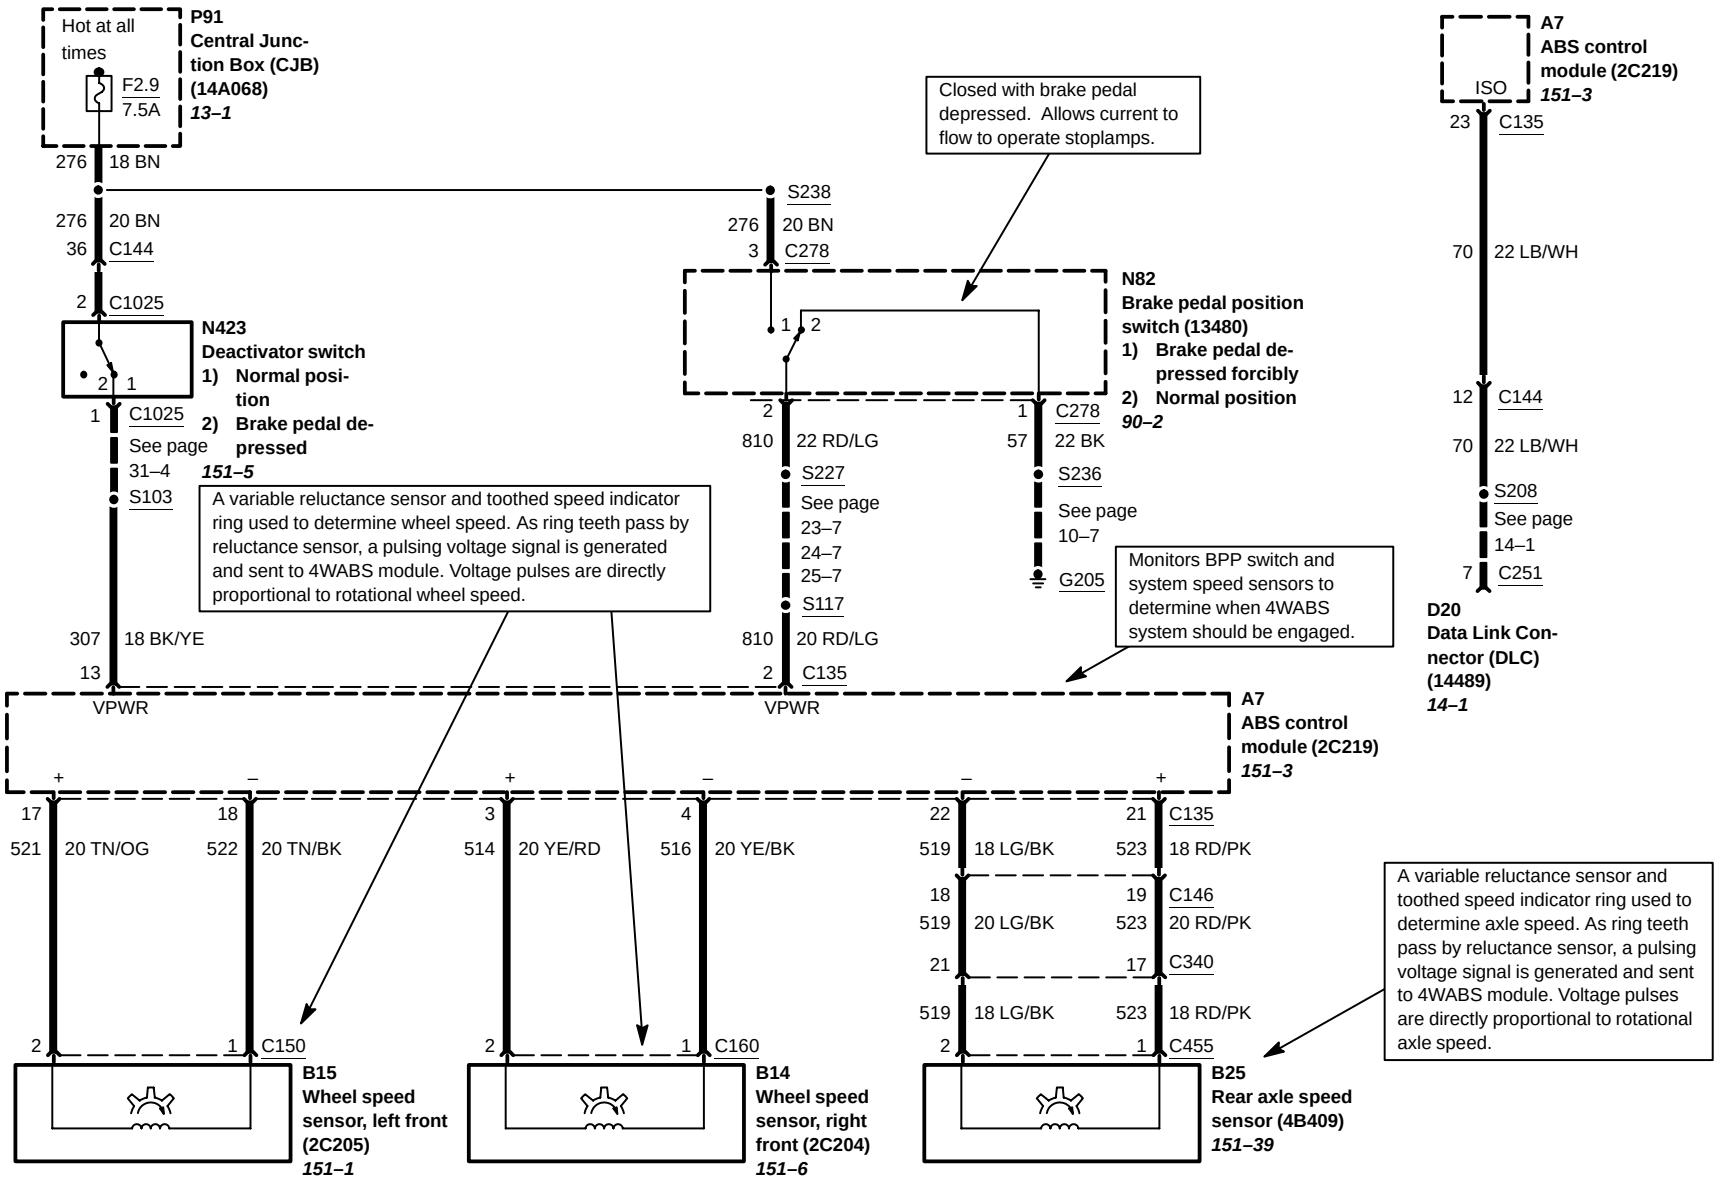
Hot at all times
F2.9
7.5A
P91
Central Junction Box (CJB)
(14A068)
13–1
276 18 BN
276 20 BN
36 C144
2 C1025
N423
Deactivator switch
1) Normal position
2) Brake pedal depressed
1 C1025
See page 31–4
151–5
S103
307 18 BK/YE
13
VPWR
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
S238
276 20 BN
3 C278
Closed with brake pedal depressed. Allows current to flow to operate stoplamps.
N82
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
90–2
2 C278
810 22 RD/LG
S227
See page 23–7
24–7
25–7
S117
810 20 RD/LG
2 C135
VPWR
1 C278
57 22 BK
S236
See page 10–7
G205
Monitors BPP switch and system speed sensors to determine when 4WABS system should be engaged.
A7
ABS control module (2C219)
151–3
ISO
23 C135
70 22 LB/WH
12 C144
70 22 LB/WH
S208
See page 14–1
7 C251
D20
Data Link Connector (DLC)
(14489)
14–1
17 521 20 TN/OG
18 522 20 TN/BK
3 514 20 YE/RD
4 516 20 YE/BK
22 519 18 LG/BK
21 523 18 RD/PK
18 519 20 LG/BK
19 523 20 RD/PK
21 519 18 LG/BK
17 523 18 RD/PK
C146
C340
2 1 C150
B15
Wheel speed sensor, left front (2C205)
151–1
2 1 C160
B14
Wheel speed sensor, right front (2C204)
151–6
2 1 C455
B25
Rear axle speed sensor (4B409)
151–39
A variable reluctance sensor and toothed speed indicator ring used to determine axle speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational axle speed.