C361

14A699

N445
Lumbar adjust
switch, left front
(14B691)

F05140

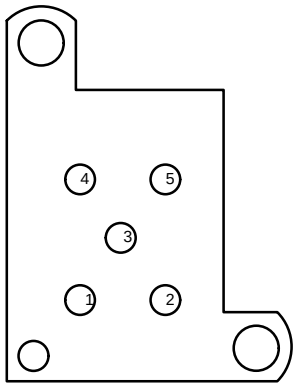

F05143

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	1097 (BN)	Power lumbar switch, left, to, Front seat lumbar compressor motor
3	490 (RD)	Voltage supplied at all times (overload protected)
4	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor
5	57 (BK)	Ground

C364

14A699

N29
Seat cushion heater,
left front

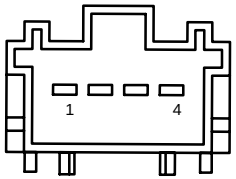

F04287

Pin	Circuit	Circuit Function
1	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
4	1065 (WH/LB)	Seat cushion heater, driver side, heater