C1254

A425
Natural Gas Vehicle
(NGV) timer jumper

12A581

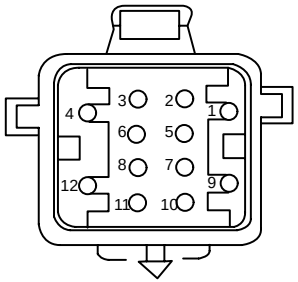

F12157

Pin	Circuit	Circuit function
1	1501 (BK)	Ground
2	651 (BK/YE)	Ground
3	1503 (BK/LB)	signal, Signal Ground
4	570 (BK/WH)	Ground
5	32 (RD/LB)	not used
6	–	not used
7	–	not used
8	–	not used
9	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
10	–	not used
11	–	not used
12	1500 (RD/WH)	Battery voltage, hot in Start and Run only, Hot in Start or Run

14K069

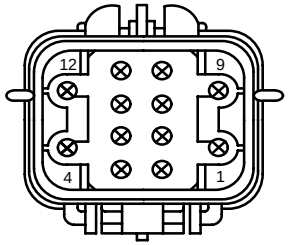

F12045

Pin	Circuit	Circuit function
1	1501 (BK)	Ground
2	1503 (BK/LB)	Ground
3	1503 (BK/LB)	Ground
4	1501 (BK)	Ground
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	1500 (RD/WH)	Voltage supplied in Start and Run (overload protected)
10	1502 (BK/YE)	not used
11	1502 (BK/YE)	not used
12	1500 (RD/WH)	Voltage supplied in Start and Run (overload protected)

C1255

12A581

K383
ABS relay

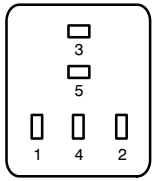

F05139

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	599 (PK/LG)	Relay, control, output
3	57 (BK)	Ground
4	128 (VT/YE)	Hot in Start or Run
5	–	not used

C1256

14290

H3
High pitch horn



F01067

Pin	Circuit	Circuit function
1	6 (YE/LG)	Horn relay, switched power, output