C475b (WH)

13A265

High mounted stop-lamp (13A613)

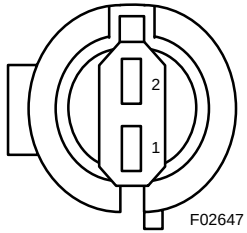

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), output
	569 (DG)	
2	1205 (BK)	Ground
	1205 (BK)	

C475c (WH)

13A265

High mounted stop-lamp (13A613)

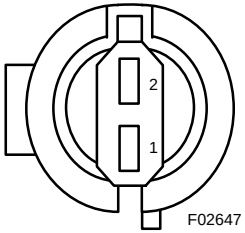

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), output
	569 (DG)	
2	1205 (BK)	Ground
	1205 (BK)	

C475d (WH)

13A265

High mounted stop-lamp (13A613)

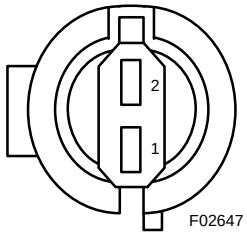

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), output
	569 (DG)	
2	1205 (BK)	Ground
	1205 (BK)	

C481 (GY)

13410

Side lamp, left rear (13411)

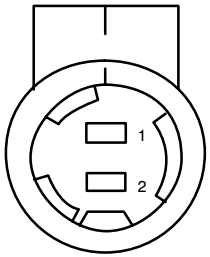

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C482 (GY)

13407

Side lamp, right rear (13411)

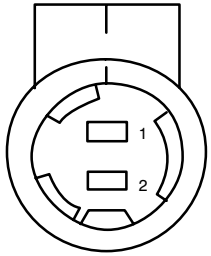

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C484 (GY)

14A005

Speaker, left rear (18808)



Pin	Circuit	Circuit function
1	801 (TN/YE)	Speaker, left rear (18808) –
2	800 (GY/LB)	Speaker, left rear (18808) +