C1123

14290

E45
Side turn signal lamp, left

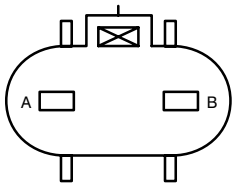

F02303

Pin	Circuit	Circuit Function
A	3 (LG/WH)	Turn lamps, feed, left front
B	57 (BK)	Ground

C1164

9H589

B135
Cylinder–head temperature sensor

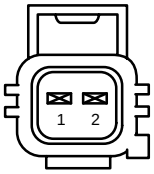

F02121

Pin	Circuit	Circuit Function
1	354 (LG/RD)	Cylinder–head temperature sensor, input
2	89 (OG)	signal, return

C1180

9H589

B41
Camshaft position sensor

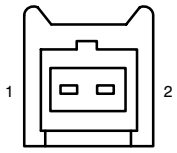

F02012

Pin	Circuit	Circuit Function
1	282 (DB/OG)	Camshaft position sensor, input
2	1202 (BN/LG)	Ground

C1181

9H589

Y108
Injector 1

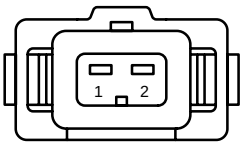

F02351

Pin	Circuit	Circuit Function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	555 (TN)	Fuel injector 1, control

C1182

9H589

Y109
Injector 2

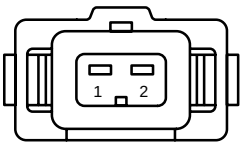

F02351

Pin	Circuit	Circuit Function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	556 (WH)	Fuel injector 2, control

C1183

9H589

Y110
Injector 3

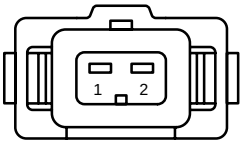

F02351

Pin	Circuit	Circuit Function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	557 (BN/YE)	Fuel injector 3, control

C1184

9H589

Y111
Injector 4

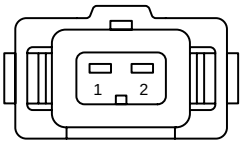

F02351

Pin	Circuit	Circuit Function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	558 (BN/LB)	Fuel injector 4, control

C1189

9H589

B8
Throttle Position Sensor (TPS)

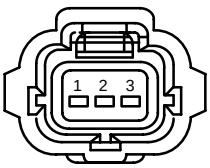

F03215

Pin	Circuit	Circuit Function
1	89 (OG)	signal, return
2	355 (GY/WH)	Throttle Position Sensor (TPS), input
3	351 (BN/WH)	Reference, voltage