## C1153 (BK)

**12614**

Height sensor, left front

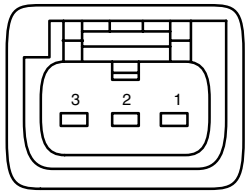


F03241

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 432 (BK/PK) | Sensor, return |
| 2 | 422 (PK/BK) | Height sensor, left front, signal |
| 3 | 426 (RD/BK) | Sensor, Power |

## C1154 (BK)

**12614**

Shock absorber solenoid valve, left front

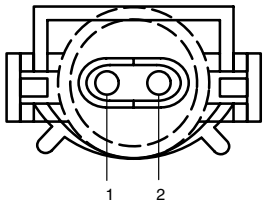


F02031

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 415 (LG/OG) | Shock absorber solenoid valve, left front, control |
| 2 | 57 (BK) | Ground |

## C1155 (BK)

**12614**

Shock absorber solenoid valve, right front

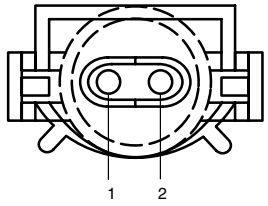


F02031

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 414 (OG/RD) | Shock absorber solenoid valve, right front, control |
| 2 | 57 (BK) | Ground |

## C1157 (BK)

**12A581**

Integrated wheel ends solenoid

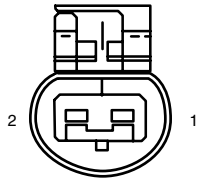


F02523

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 474 (OG/LG) | Voltage supplied at all times (overload protected) |
| 2 | 605 (RD) | Integrated wheel ends solenoid, control |

## C1158 (BK)

Early production

**12A581**

Electronic fan clutch

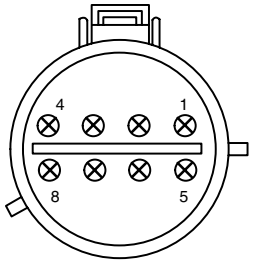


F08259

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 638 (OG/LB) | cooling fan speed signal |
| 2 | 570 (BK/WH) | Ground |
| 3 | – | not used |
| 4 | 639 (LG/VT) | cooling fan control signal |
| 5 | 1928 (RD/WH) | Voltage supplied in Start and Run (overload protected) |
| 6 | 1929 (GY/YE) | Voltage supplied in Start and Run (overload protected) |
| 7 | – | not used |
| 8 | – | not used |