C3015

14B084

M215
Power seat motor
assembly, right

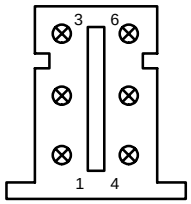

F06138

Pin	Circuit	Circuit function
1	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
2	985 (RD/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
3	984 (YE/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
4	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor
5	988 (YE/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
6	989 (RD/LG)	Seat adjust switch, to, rear, Tilt, Seat motor

C3027

14334

N470
Parking aid disable
switch (15A860)

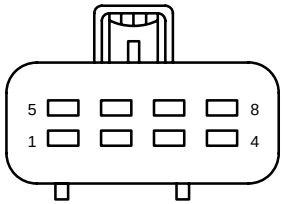

F08060

Pin	Circuit	Circuit function
1	1435 (DG/VT)	Switched, Ground
2	875 (BK/LB)	Ground
3	–	not used
4	875 (BK/LB)	Ground
5	–	not used
6	1436 (VT/OG)	On/Off signal, Light emitting diode (LED), control
7	–	not used
8	19 (LB/RD)	Voltage supplied at all times (overload protected)