Seat adjust switch, passenger side front

Schematic

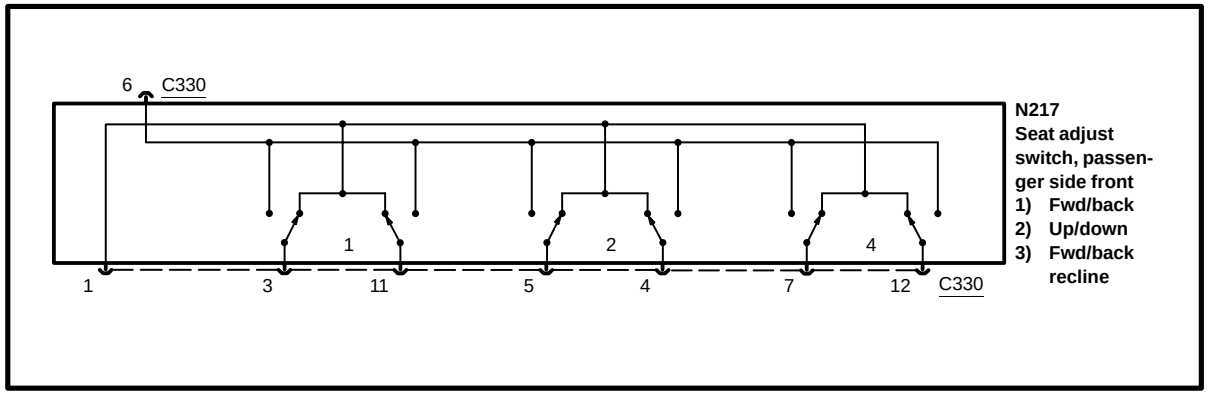

Terminals

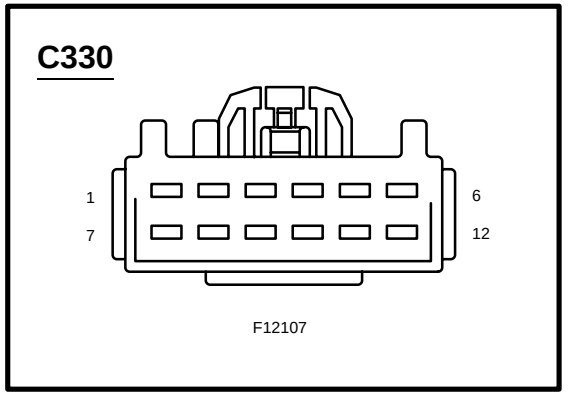

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Backrest circuit	6 and 7	Rest /Backrest rearward	Open circuit
		Backrest forward	Closed circuit
	6 and 12	Rest /Backrest forward	Open circuit
		Backrest rearward	Closed circuit
Forward/Rearward circuit	6 and 3	Rest /Seat rearward	Open circuit
		Seat Forward	Closed circuit
	6 and 11	Rest /Seat rearward	Open circuit
		Tilt telescope motors	Closed circuit
Height circuit	6 and 4	Rest /Front Height Down	Open circuit
		Front Height Up	Closed circuit
	6 and 5	Rest /Front Height Up	Open circuit
		Front Height Down	Closed circuit