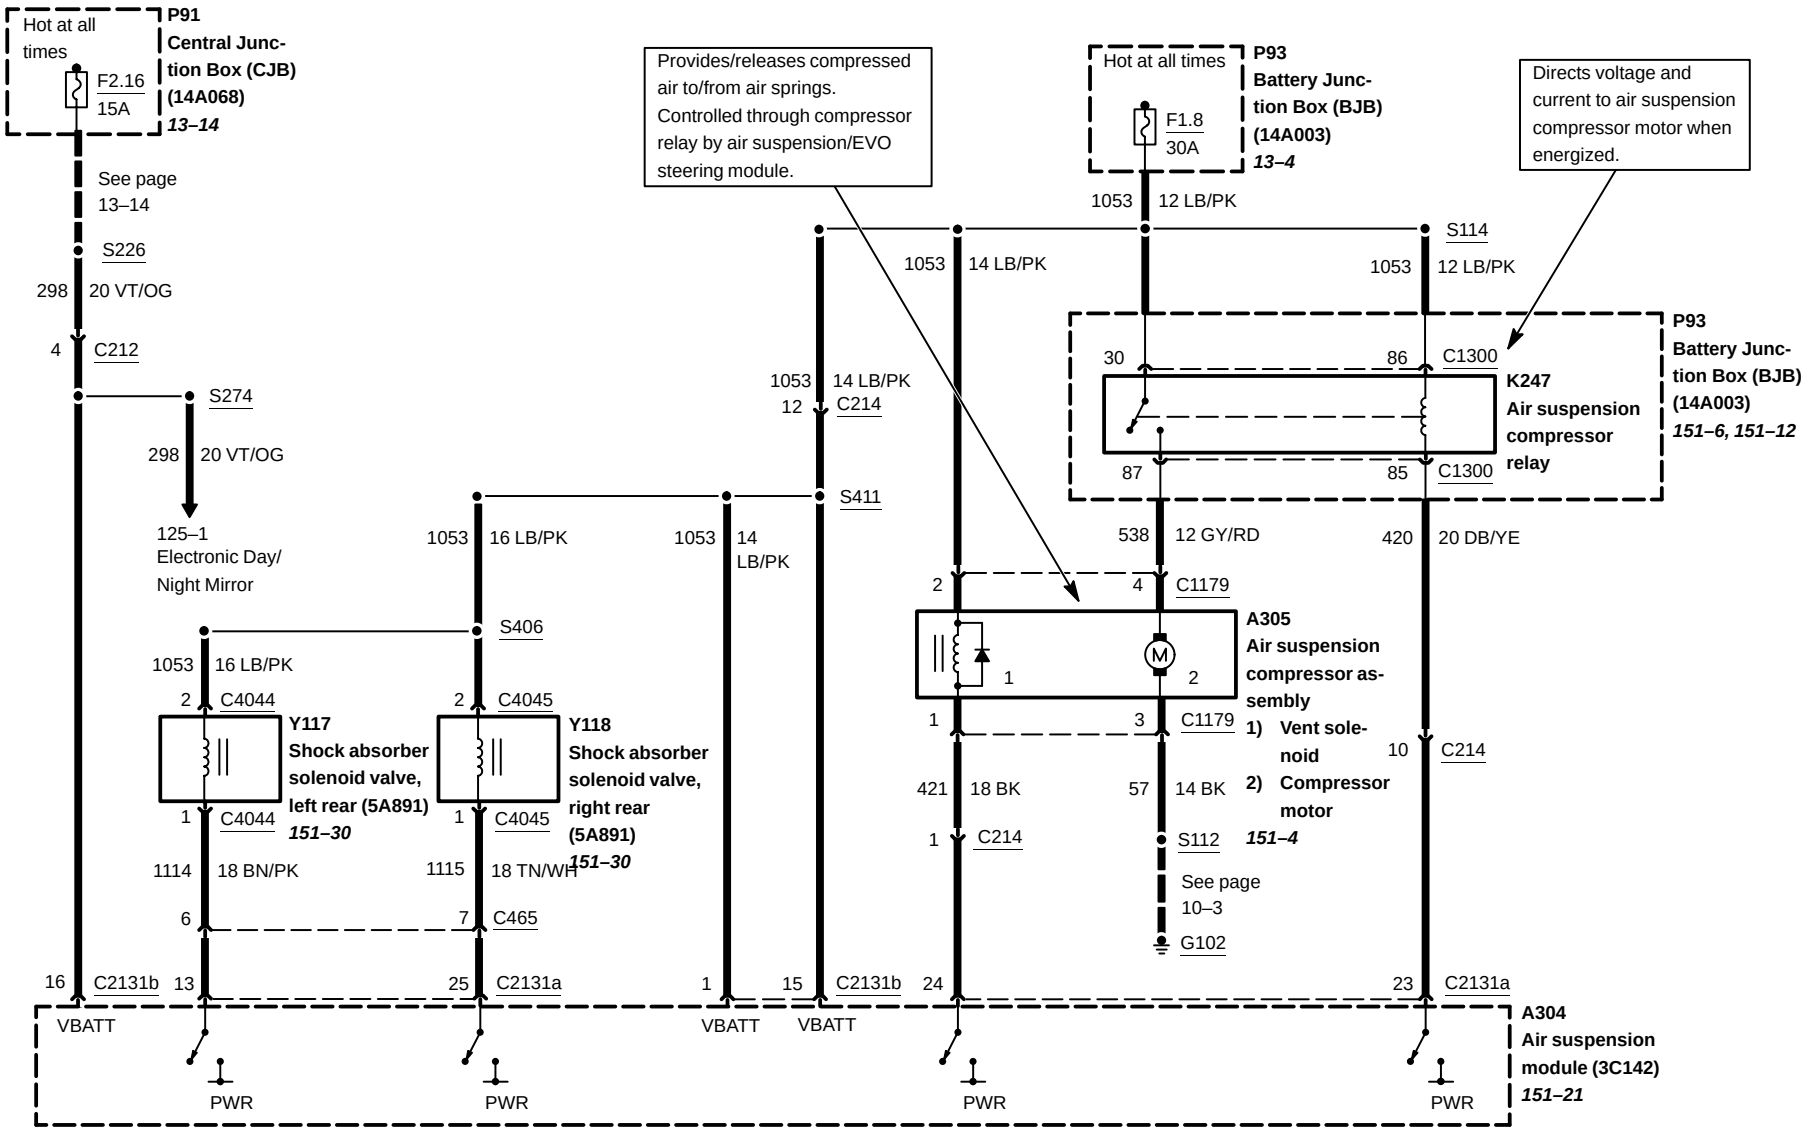
Hot at all times
F2.16
15A
P91
Central Junction Box (CJB)
(14A068)
13–14
See page 13–14
S226
298 20 VT/OG
4 C212
S274
298 20 VT/OG
125–1
Electronic Day/ Night Mirror
Provides/releases compressed air to/from air springs. Controlled through compressor relay by air suspension/EVO steering module.
Hot at all times
F1.8
30A
P93
Battery Junction Box (BJB)
(14A003)
13–4
Directs voltage and current to air suspension compressor motor when energized.
1053 12 LB/PK
S114
1053 14 LB/PK
1053 12 LB/PK
30
86
C1300
K247
Air suspension compressor relay
87
85
C1300
P93
Battery Junction Box (BJB)
(14A003)
151–6, 151–12
1053 14 LB/PK
12 C214
S411
1053 16 LB/PK
1053 14 LB/PK
538 12 GY/RD
420 20 DB/YE
2
4
C1179
S406
1053 16 LB/PK
2 C4044
2 C4045
A305
Air suspension compressor assembly
1) Vent solenoid
2) Compressor motor
1
2
1
3
C1179
Y117
Shock absorber solenoid valve, left rear (5A891)
151–30
Y118
Shock absorber solenoid valve, right rear (5A891)
151–30
1 C4044
1 C4045
1114 18 BN/PK
1115 18 TN/WH
6
7
C465
421 18 BK
57 14 BK
1 C214
S112
151–4
See page 10–3
G102
10
C214
16 C2131b
13
25 C2131a
1 15 C2131b
24
23 C2131a
VBATT
VBATT
VBATT
PWR
PWR
PWR
PWR
A304
Air suspension module (3C142)
151–21