C527

14A488

Exterior rear view mirror switch (17B676)

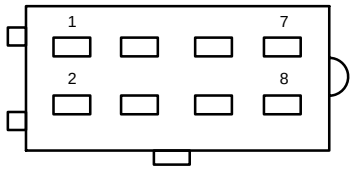

F08013

Pin	Circuit	Circuit function
1	541 (DB)	Up/Down mirror movement
2	544 (VT)	Up/Down mirror movement
3	542 (YE)	Mirror motor, feed
4	1205 (BK)	Ground
5	543 (DG)	Right/Left mirror movement
6	956 (OG/LG)	Voltage supplied at all times (overload protected)
7	540 (RD)	Right/Left mirror movement
8	–	not used

C602 (BK)

14A584

Door ajar switch, right front



F02221

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	761 (GY/RD)	Door ajar switch, right front, signal

C603 (GY)

14A584

Door lock actuator, right front



F02383

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock/unlock relay, switched output, Lock
2	118 (PK/OG)	Door lock/unlock relay, switched output, Unlock

C604 (GY)

14A488

Window adjust switch, passenger side

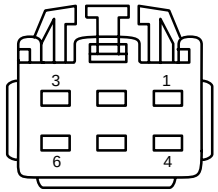

F06213

Pin	Circuit	Circuit function
1	314 (TN/LB)	Window switch, feed, right front, Down
2	334 (RD/YE)	Window motor, feed, Down
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	333 (YE/RD)	Window motor, feed, Up
6	313 (WH/YE)	Window switch, feed, right front, Up