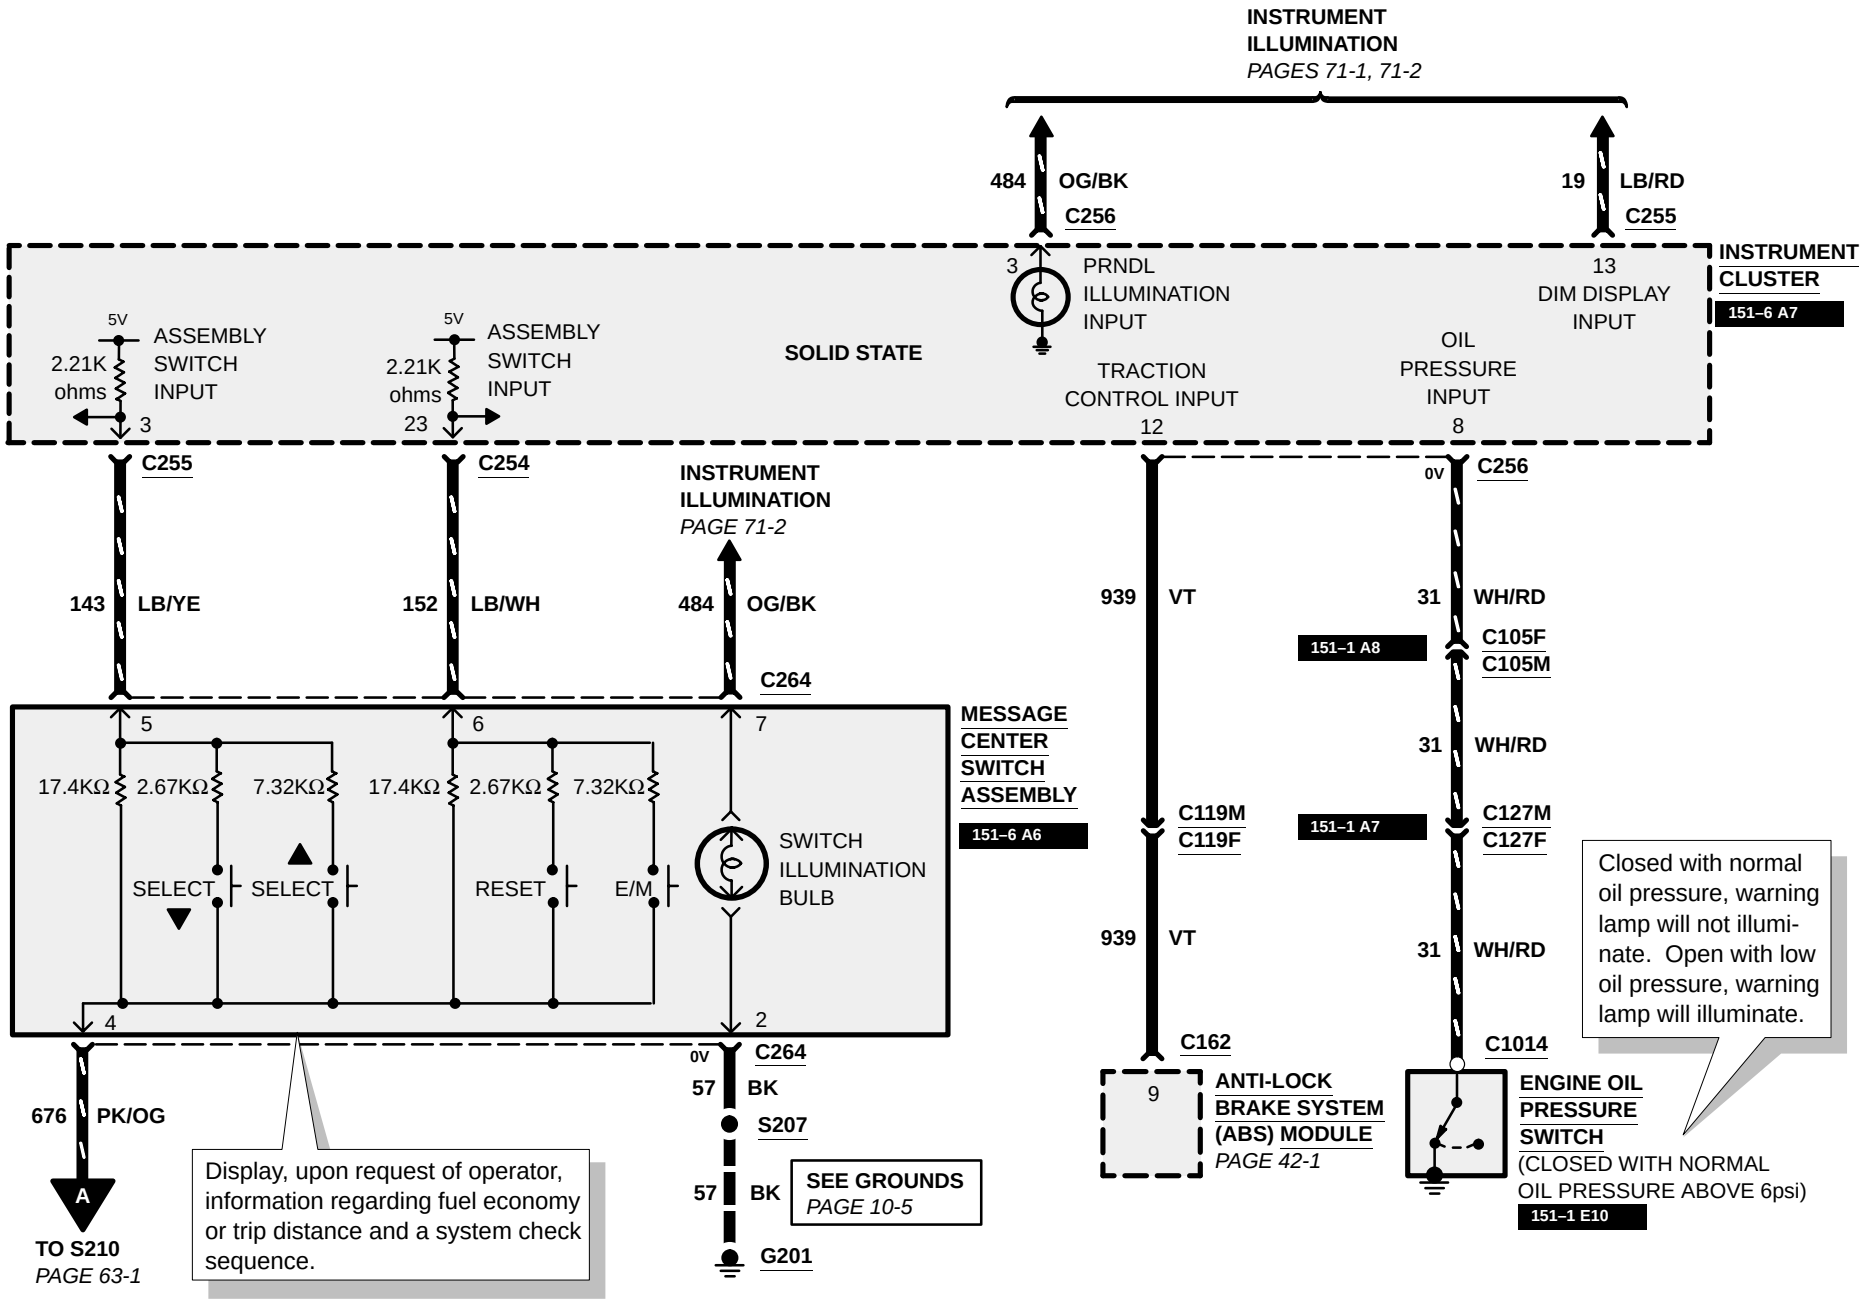
INSTRUMENT ILLUMINATION
PAGES 71-1, 71-2
484 OG/BK
C256
19 LB/RD
C255
INSTRUMENT CLUSTER
151–6 A7
3 PRNDL ILLUMINATION INPUT
13 DIM DISPLAY INPUT
5V
2.21K ohms
ASSEMBLY SWITCH INPUT
3
5V
2.21K ohms
ASSEMBLY SWITCH INPUT
23
SOLID STATE
TRACTION CONTROL INPUT
12
OIL PRESSURE INPUT
8
C255
143 LB/YE
C254
152 LB/WH
INSTRUMENT ILLUMINATION
PAGE 71-2
484 OG/BK
C264
939 VT
0V
C256
31 WH/RD
151–1 A8
C105F
C105M
31 WH/RD
MESSAGE CENTER SWITCH ASSEMBLY
151–6 A6
5
6
7
17.4KΩ
2.67KΩ
7.32KΩ
17.4KΩ
2.67KΩ
7.32KΩ
SELECT
SELECT
RESET
E/M
SWITCH ILLUMINATION BULB
C119M
C119F
151–1 A7
C127M
C127F
939 VT
31 WH/RD
4
2
676 PK/OG
A
TO S210
PAGE 63-1
Display, upon request of operator, information regarding fuel economy or trip distance and a system check sequence.
0V
C264
57 BK
S207
57 BK
SEE GROUNDS
PAGE 10-5
G201
C162
9
ANTI-LOCK BRAKE SYSTEM (ABS) MODULE
PAGE 42-1
C1014
ENGINE OIL PRESSURE SWITCH
(CLOSED WITH NORMAL OIL PRESSURE ABOVE 6psi)
151–1 E10
Closed with normal oil pressure, warning lamp will not illuminate. Open with low oil pressure, warning lamp will illuminate.