## C100 (BK)

**14A280**

A/C clutch solenoid




F02245

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 321 (GY/WH) | A/C clutch relay, switched output |
| 2 | 57(BK) | Ground |

## C101 (BK)

**12B637**

Crankshaft position sensor (6C315)

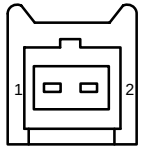


F02012

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 349 (DB) | Crankshaft position sensor (6C315) + |
| 2 | 350 (GY) | Crankshaft position sensor (6C315) – |

## C102a (BK)

**14A280**

Generator

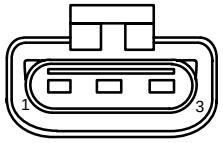


F03074

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 36 (YE/WH) | Voltage supplied at all times (overload protected) |
| 2 | – | not used |
| 3 | 904 (LG/RD) | Generator/Battery indicator, control |

## C102b

**14A280**

Generator



F01057

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 38 (BK/OG) | Voltage supplied at all times (not overload protected) |

## C103 (WH)

**14A280**

Oil pressure switch (9278)

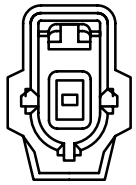

F01016

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 253 (DG/WH) | Oil pressure switch (9278), input |

## C109 (BK)

**12B637**

Knock sensor (12A699)

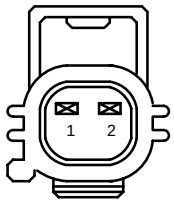


F02064

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 310 (YE/RD) | Knock sensor (12A699) |
| 2 | 311 (DG/VT) | Knock sensor (12A699) |