C359

14A699

A224
Heated seat module, driver side front

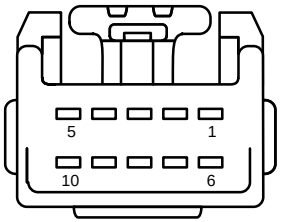

F10091

Pin	Circuit	Circuit function
1	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
2	1020 (DG/VT)	Climate controlled seat module
3	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
4	1153 (RD/BK)	Voltage supplied at all times (overload protected)
5	1067 (VT/LB)	Seat back heater, driver side, heater, return
6	1040 (RD/BK)	Voltage in Run (overload protected)
7	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
8	1205 (BK)	Ground
9	–	not used
10	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, driver side front

C360

14A699

N216
Seat adjust switch, driver side front (14A701)

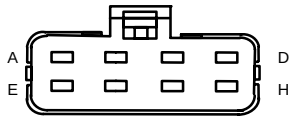

F08265

Pin	Circuit	Circuit function
A	1463 (RD/YE)	Power seat switch, left, to, Driver seat module (14C718)
A	979 (RD/LB)	Fwd/Rwd motor, Forward
B	1467 (GY/YE)	Power seat switch, left, to, Driver seat module (14C718)
B	982 (YE/LG)	Rear height motor, Down
C	1468 (GY/LB)	Power seat switch, left, to, Driver seat module (14C718)
C	983 (RD/LG)	Rear height motor, Up
D	1464 (YE)	Power seat switch, left, to, Driver seat module (14C718)
D	990 (YE/LB)	Front height motor, Down
E	1205 (BK)	Ground
E	1205 (BK)	Ground
F	1466 (GY/OG)	Power seat switch, left, to, Driver seat module (14C718)
F	981 (RD/WH)	Fwd/Rwd motor, Forward
G	1465 (GY/WH)	Power seat switch, left, to, Driver seat module (14C718)
G	980 (YE/WH)	Fwd/Rwd motor, Rearward
H	956 (OG/LG)	Voltage supplied at all times (overload protected)
H	566 (DG)	Voltage supplied at all times (overload protected)