C420e

14A005

A212
Rear Electronic
Module (REM)

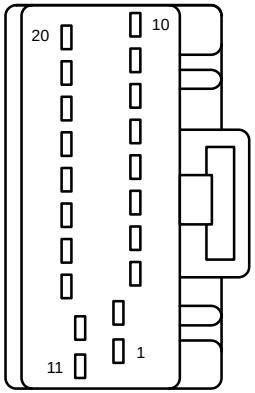

F20017

Pin	Circuit	Circuit Function
1	15S-DK32 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switch
2	31-DK30 (BK/OG)	Ground
3	30–DK31 (RD/GN)	Voltage supplied at all times (not overload protected)
4	31S-DK30 (BK/OG)	Ground, switch
5	–	not used
6	8-AG16 (WH/BU)	Sensor signal
7	8-AJ18 (WH/VT)	Sensor signal
8	–	not used
9	–	not used
10	–	not used
11	15S-RG2 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switch

Pin	Circuit	Circuit Function
12	31S-RG2A (BK/RD)	Ground, switch
13	91-HB24 (BK/YE)	Ground
14	–	not used
15	8-GA7 (WH/RD)	Sensor signal
16	8-GA25 (WH/BU)	Sensor signal
17	8-AA10 (WH/BK)	Sensor signal
18	8-AA20 (WH/BU)	Sensor signal
19	10-AJ82 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
20	10-AJ18 (GY/WH)	Signal 2 (Y–direction, reverse, downward)