C432

14K733

K45
Engine cooling fan relay

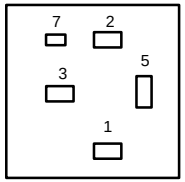

F05090

Pin	Circuit	Circuit function
1	15-PA7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-PA7 (BK/BU)	Ground, Switched
3	30-PA8 (RD)	Voltage supplied at all times (not overload protected)
5	15S-PA9 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched
7	31-PA7 (BK)	Ground

C437

14K024

N10
Rear window defrost switch (18578)

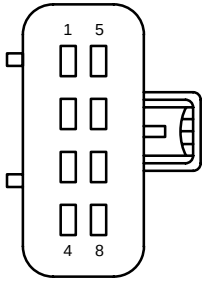

F08060

Pin	Circuit	Circuit function
1	31-HB22 (BK) + 31-LH27 (BK)	Ground
	31-HB22 BK) + 31-LH45 (BK)	Ground
2	31S-HB29 (BK/WH)	Ground, Switched
3	–	not used
4	31-HB22 (BK) + 31-LH37 (BK)	Ground
5	–	not used
6	15S-HB2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
7	–	not used
8	64S-LH27 (BU/YE) + 64S-LH37 (BU)	Variable D.C. voltage (not overload protected), Switched
	64S-LH37 (BU) + 64-LH45 (BU/OG)	Variable D.C. voltage (not overload protected), Switched