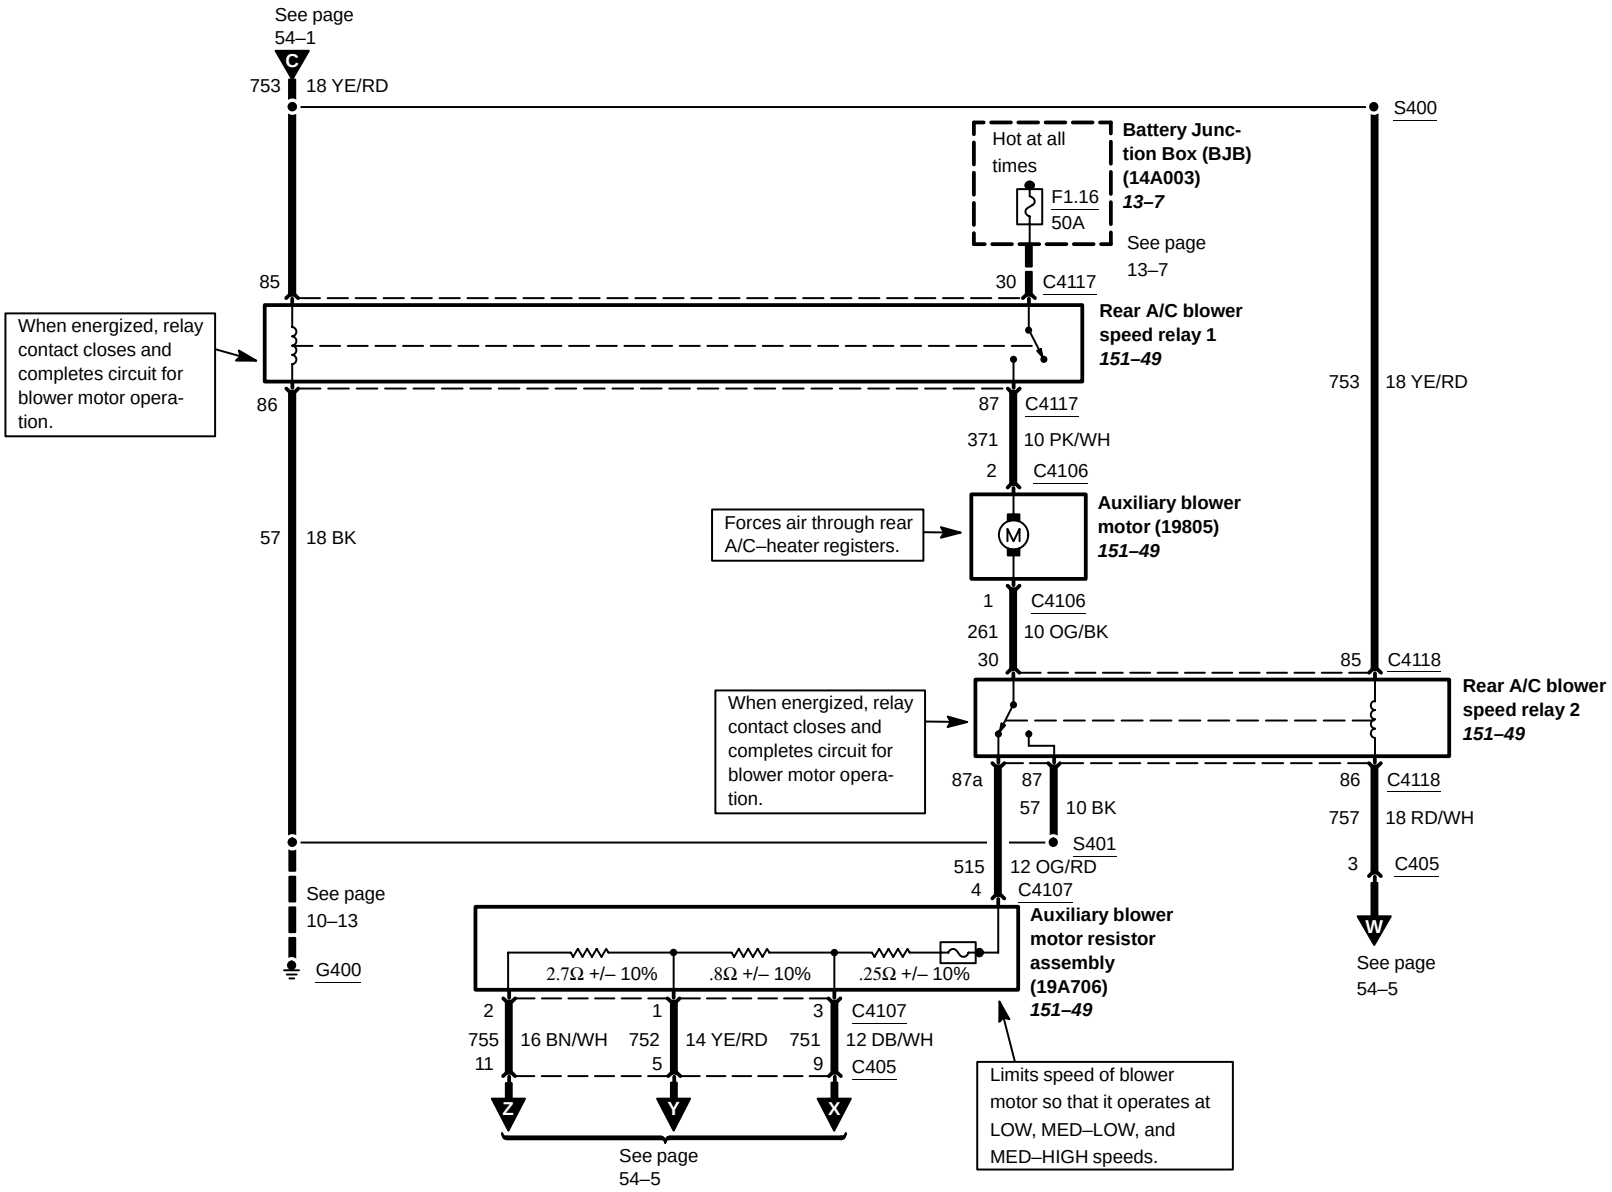
See page 54–1
C
753 18 YE/RD
S400
Hot at all times
Battery Junction Box (BJB) (14A003) 13–7
F1.16 50A
See page 13–7
85
30 C4117
When energized, relay contact closes and completes circuit for blower motor operation.
Rear A/C blower speed relay 1 151–49
86
87 C4117
753 18 YE/RD
371 10 PK/WH
2 C4106
57 18 BK
Forces air through rear A/C–heater registers.
Auxiliary blower motor (19805) 151–49
M
1 C4106
261 10 OG/BK
30
85 C4118
When energized, relay contact closes and completes circuit for blower motor operation.
Rear A/C blower speed relay 2 151–49
87a
87
86 C4118
57 10 BK
757 18 RD/WH
S401
515 12 OG/RD
3 C405
See page 10–13
4 C4107
Auxiliary blower motor resistor assembly (19A706) 151–49
G400
2.7Ω +/– 10%
.8Ω +/– 10%
.25Ω +/– 10%
2 755 11
16 BN/WH
1 752 5
14 YE/RD
3 751 9
C4107
12 DB/WH
C405
Z
Y
X
See page 54–5
Limits speed of blower motor so that it operates at LOW, MED–LOW, and MED–HIGH speeds.
W
See page 54–5