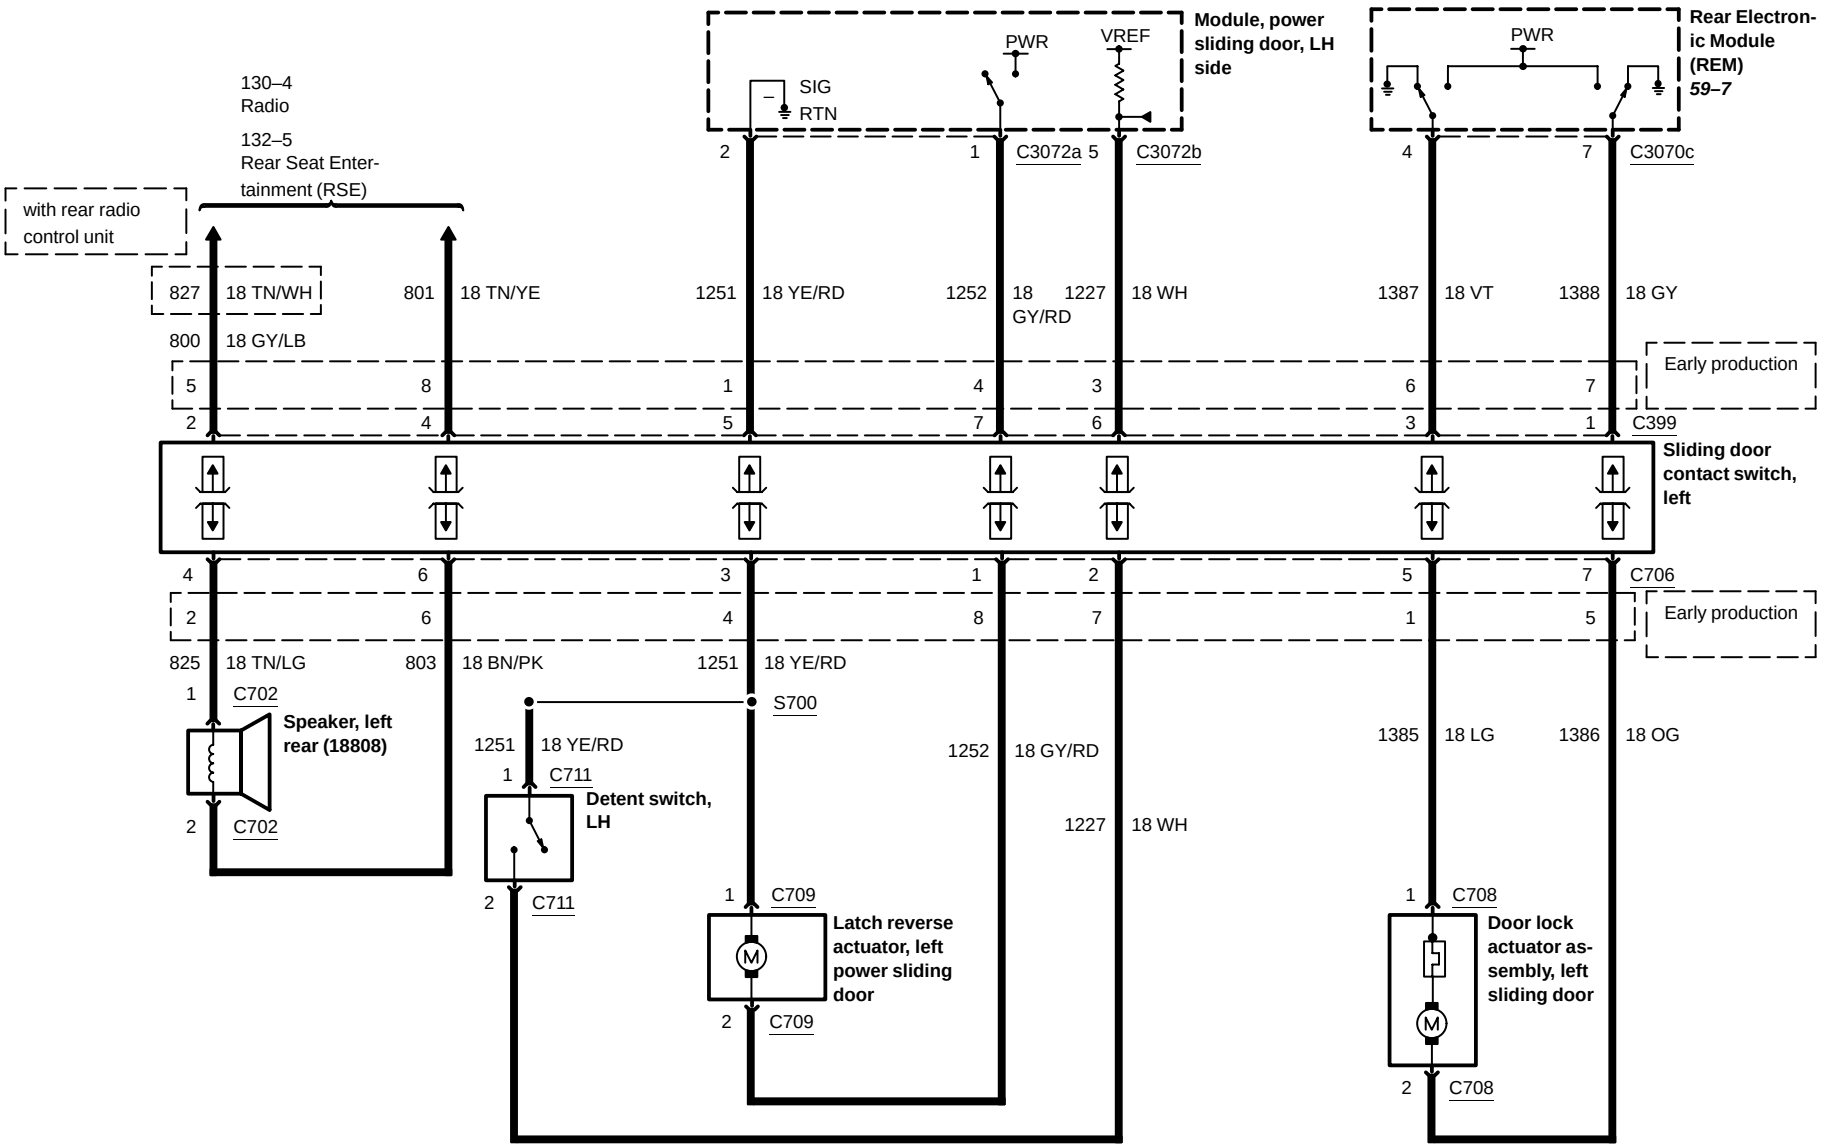
130–4
Radio
132–5
Rear Seat Entertainment (RSE)
with rear radio control unit
Module, power sliding door, LH side
SIG RTN
PWR
VREF
C3072a
C3072b
Rear Electronic Module (REM) 59–7
PWR
C3070c
827 18 TN/WH
801 18 TN/YE
1251 18 YE/RD
1252 18 GY/RD
1227 18 WH
1387 18 VT
1388 18 GY
800 18 GY/LB
Early production
C399
Sliding door contact switch, left
C706
825 18 TN/LG
803 18 BN/PK
1251 18 YE/RD
S700
Speaker, left rear (18808)
C702
1251 18 YE/RD
C711
Detent switch, LH
1252 18 GY/RD
1227 18 WH
1385 18 LG
1386 18 OG
C709
Latch reverse actuator, left power sliding door
C708
Door lock actuator assembly, left sliding door