C163

18C463

M202
Auxiliary coolant pump motor

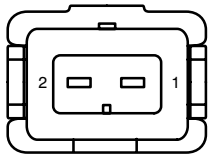

F02089

Pin	Circuit	Circuit function
1	30S-FB1 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
2	31-FB1 (BK/YE)	Ground

C164

7C078

B235
Intermediate Shaft Speed (ISS) sensor (7M183)

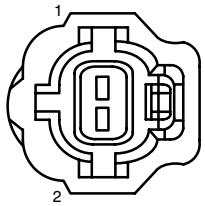

F02027

Pin	Circuit	Circuit function
1	8-TA74 (WH/BK)	Sensor signal
2	9-TA74 (BN/YE)	Sensor signal return (reference/ground)

C165

7C078

B110
Output Shaft Speed (OSS) sensor (7M101)

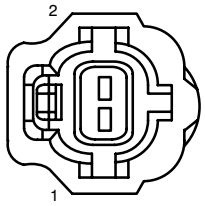

F02027

Pin	Circuit	Circuit function
1	8-TA51 (WH/RD)	Sensor signal
2	9-TA51 (BN/RD)	Sensor signal return (reference/ground)

C167

7C078

B234
Digital Transmission Range (DTR) sensor (7F293)

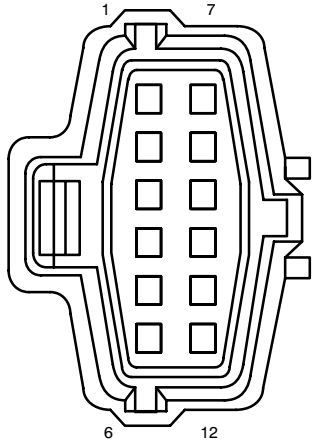

F12040

Pin	Circuit	Circuit function
1	–	not used
2	9-TA18 (BN/YE)	Sensor signal return (reference/ground)
3	8-TA37 (WH)	Digital Transmission Range (DTR) sensor (7F293), Sensor signal, TR3A
4	8-TA40 (WH/GN)	Digital Transmission Range (DTR) sensor (7F293), Sensor signal, TR1
5	8-TA39 (WH/BU)	Digital Transmission Range (DTR) sensor (7F293), Sensor signal, TR2
6	8-TA38 (WH/RD)	Digital Transmission Range (DTR) sensor (7F293), Sensor signal, TR4
7	–	not used
8	–	not used
9	–	not used
10	50-BB15 (GY/OG)	Voltage, ignition switch in Start (not overload protected)
11	–	not used
12	50S-BB12 (GY)	Voltage, ignition switch in Start (not overload protected), Switched