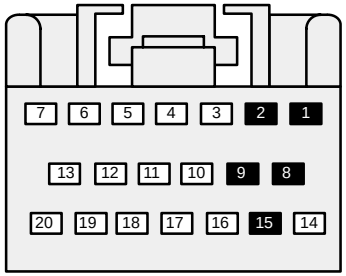

C224

FRONT CONTROL UNIT

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	914 (TN/OG)	SCP Bus (+)/Data (+)
4	915 (PK/LB)	SCP Bus (+)/Data (–)
5	1068 (LG/BK)	Audio System ON
6	832 (LB/PK)	J1708 Bus/Audio Corporate Protocol A
7	833 (TN)	J1708 Bus/Audio Corporate Protocol B
8	–	NOT USED
9	–	NOT USED
10	723 (GY/RD)	Cellular Phone-Phone
11	724 (LB/YE)	Cellular Phone-Phone Minus
12	725 (PK)	Cellular Phone-Phone Plus
13	874 (GY)	Right Limit-A-Passenger
14	276 (BN)	Switch Feed
15	–	NOT USED
16	819 (LG/WH)	Amplifier Switch Ground to LF Speaker
17	690 (GY)	CD- Right Channel Signal IN
18	799 (OG/BK)	CD- Right Channel Signal OUT
19	856 (VT)	CD- Left Channel Signal IN
20	798 (LG/RD)	CD- Left Channel Signal OUT

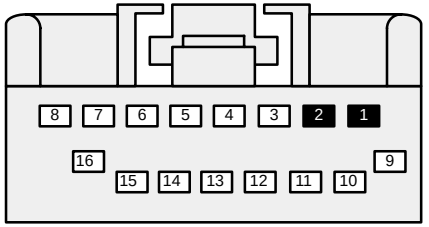

C231

FRONT CONTROL UNIT

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	1000 (RD/BK)	Fused Ignition “Start” to Module
4	651 (BK/YE)	Dedicated Ground
5	802 (OG/RD)	Amp/Speaker Switch Feed to RR Speaker
6	803 (BN/PK)	Amp/Speaker Switch Ground to RR Speaker
7	805 (WH/LG)	Speaker Voice Coil Feed-Front (Right)
8	811 (DG/OG)	Speaker Switch Ground to RF Speaker
9	797 (LG/VT)	Battery Feed to Stereo
10	1002 (BK/PK)	Fused Ignition “Run/Accessory” to Module
11	694 (BK/LG)	Radio/Amp/CD Player/Changer Amp Power Return
12	800 (GY/LB)	Amp/Speaker Switch Feed to LR Speaker
13	801 (TN/YE)	Amp/Speaker Switch Ground to LR Speaker
14	804 (OG/LG)	Speaker Voice Coil Feed-Front (Left)
15	813 (LB/WH)	Speaker Switch Ground to LF Speaker
16	694 (BK/LG)	Radio/Amp/CD Player/Changer Amp Power Return