C451b (BU)

14014

A77
Anti–theft/central
locking module

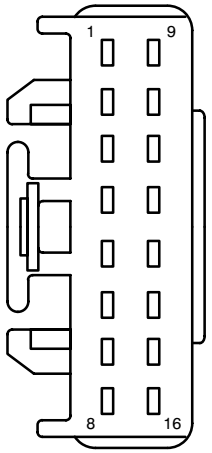

F16029

Pin	Circuit	Circuit function
1	31S-GL27 (BK/OG)	Ground, Switched
2	31S-GL20 (BK/RD)	Ground, Switched
3	31S-GL7 (BK/YE)	Ground, Switched
4	8-AA6 (WH)	Sensor signal
5	31S-GL6 (BK/OG)	Ground, Switched
6	31S-GL24 (BK/YE)	Ground, Switched
7	–	not used
8	49-GL26 (BU/YE)	Pulsed power feed (overload protected)
9	31S-GL47 (BK/BU)	Ground, Switched
10	31S-GL15 (BK/OG)	Ground, Switched
11	31S-AA61 (BK/BU)	Ground, Switched
	31S-AA61A (BK/BU)	Ground, Switched
12	31S-GL46 (BK/YE)	Ground, Switched
13	–	not used
14	–	not used
15	31S-AA62 (BK/WH) + 31S-AA62A (BK/WH)	Ground, Switched
16	33-AA60 (YE)	Switched between: Battery voltage, Ground or Open