C235

IP Harness

Radio

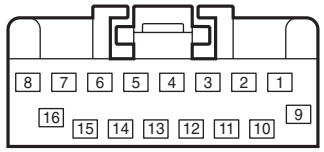

3577184C1

Pin	Circuit	Circuit Function
1	19 (LB/RD)	Instrument panel lamps feed
2	57 (BK)	Ground circuit
3	—	Not used
4	—	Not used
5	802 (OG/RD)	Amplifier/speaker switch feed to right rear speaker
6	803 (BN/PK)	Amplifier/speaker switch ground to right rear speaker
7	805 (WH/LG)	Speaker voice coil feed-front (right channel)
8	811 (DG/OG)	Speaker switch ground to right front speaker
9	797 (LG/VT)	Battery feed to stereo
10	1002 (BK/PK)	Fused ignition "run/accessory" to module, GEM-input
11	694 (BK/LG)	Radio/power return
12	800 (GY/LB)	Amplifier/speaker switch feed to left rear speaker
13	801 (TN/YE)	Amplifier/speaker switch ground to left rear speaker
14	804 (OG/LG)	Speaker voice coil feed-front (left channel)
15	813 (LB/WH)	Speaker switch ground to left front speaker
16	694(BK/LG)	Radio/power return

C236

CAB Harness

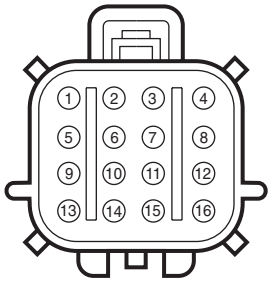

3574238C1

IP Harness

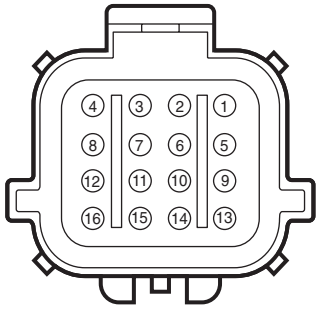

3574235C1

(1) 14 (BN)
(2) 344 (BK/YE)
(3) 803 (BN/PK)
(4) 804 (OG/LG)
(5) 53 (BK/LB)
(6) 345 (BK/PK)
(7) 54 (LG/YE)
(8) 813 (LB/WH)
(9) 805 (WH/LG)
(10) 811 (DG/OG)
(11)
(12) 800 (GY/LB)
(13) 59 (DG/VT)
(14) 85 (BN/LB)
(15) 802 (OG/RD)
(16) 801 (TN/YE)