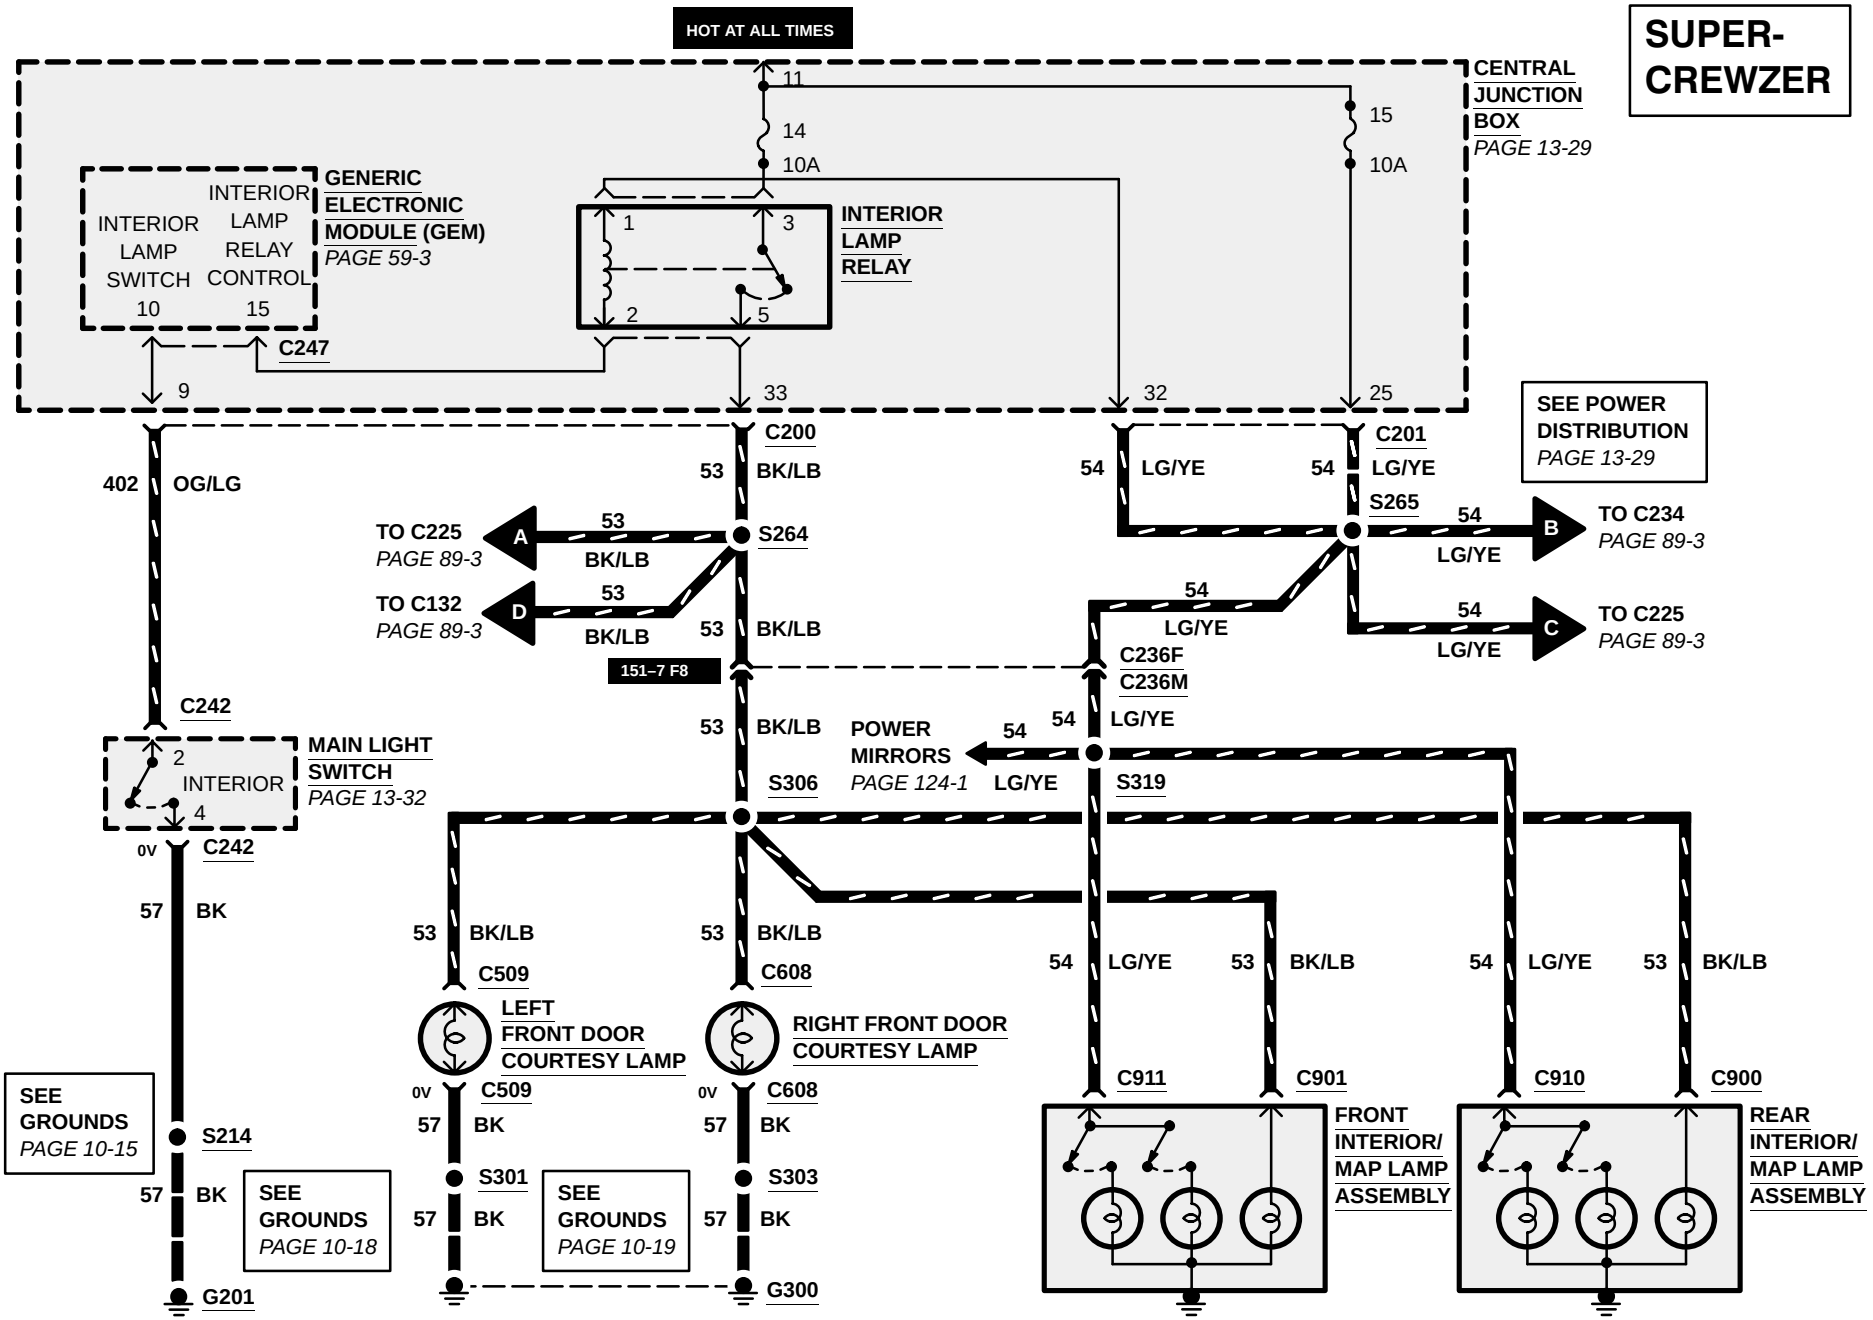
HOT AT ALL TIMES
SUPER-CREWZER
CENTRAL JUNCTION BOX
PAGE 13-29
11
14
10A
15
10A
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-3
INTERIOR LAMP SWITCH
INTERIOR LAMP RELAY CONTROL
10
15
INTERIOR LAMP RELAY
1
3
2
5
C247
9
33
32
25
SEE POWER DISTRIBUTION
PAGE 13-29
C200
C201
402 OG/LG
53 BK/LB
54 LG/YE
54 LG/YE
S265
TO C225
PAGE 89-3
A
53 BK/LB
S264
54 LG/YE
B
TO C234
PAGE 89-3
TO C132
PAGE 89-3
D
53 BK/LB
53 BK/LB
54 LG/YE
54 LG/YE
C
TO C225
PAGE 89-3
151–7 F8
C236F
C236M
C242
53 BK/LB
POWER MIRRORS
PAGE 124-1
54
54 LG/YE
MAIN LIGHT SWITCH
PAGE 13-32
2
INTERIOR
4
S306
LG/YE
S319
0V
C242
57 BK
53 BK/LB
53 BK/LB
54 LG/YE
53 BK/LB
54 LG/YE
53 BK/LB
C509
C608
LEFT FRONT DOOR COURTESY LAMP
RIGHT FRONT DOOR COURTESY LAMP
C911
C901
C910
C900
SEE GROUNDS
PAGE 10-15
0V
C509
0V
C608
FRONT INTERIOR/ MAP LAMP ASSEMBLY
REAR INTERIOR/ MAP LAMP ASSEMBLY
S214
57 BK
57 BK
S301
57 BK
S303
57 BK
SEE GROUNDS
PAGE 10-18
SEE GROUNDS
PAGE 10-19
G201
G300