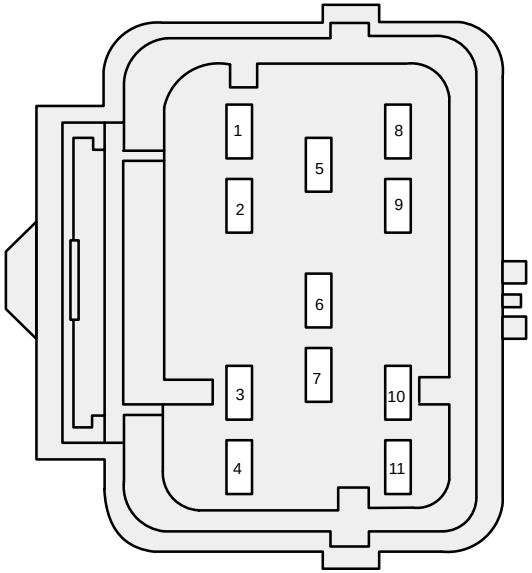


**C261**
**RESTRAINTS CONTROL MODULE (RCM)**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 964 (DB/LG) | Power (Hot in Run) |
| 2 | 615 (GY/WH) | Driver Air Bag Igniter #1 Return |
| 3 | 614 (GY/OG) | Driver Air Bag Igniter #1 Feed |
| 4 | 70 (LB/WH) | Diagnostic to Data Link Connector (DLC) |
| 5 | 616 (PK/BK) | Passenger Air Bag Igniter #1 Return |
| 6 | 607 (LB/OG) | Passenger Air Bag Igniter #1 Feed |
| 7 | 964 (DB/LG) | Vehicle ID |
| 8 | 57 (BK) | Ground |
| 9 | 608 (BK/YE) | Warning Lamp |
| 10 | 57 (BK) | Ground |
| 11 | 1083 (LB/BK) | Warning Chime |

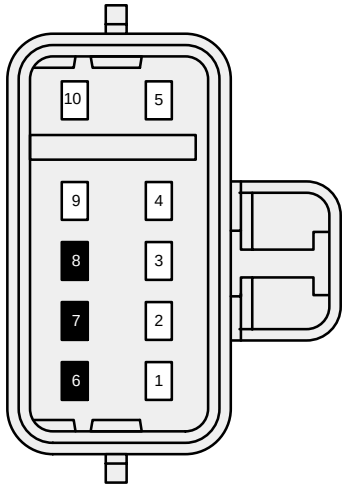


**C310**
**PASSENGER SEAT WEIGHT MODULE**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 1570 (TN/BK) | Weight Sensor |
| 2 | 1569 (GY/LB) | Weight Sensor |
| 3 | 1568 (RD/WH) | Weight Sensor |
| 4 | 964 (DB/LG) | Power (Hot in Start or Run) |
| 5 | 1556 (OG/PK) | RCM Feed |
| 6 | – | NOT USED |
| 7 | – | NOT USED |
| 8 | – | NOT USED |
| 9 | 676 (PK/OG) | Ground |
| 10 | 1557 (DB/OG) | RCM Return |

**CONNECTOR REFERENCE LIST**

| CONNECTOR | SECTION-PAGE |
|---|---|
| C250 | 60-8 |
| C2004 | 65-3 |