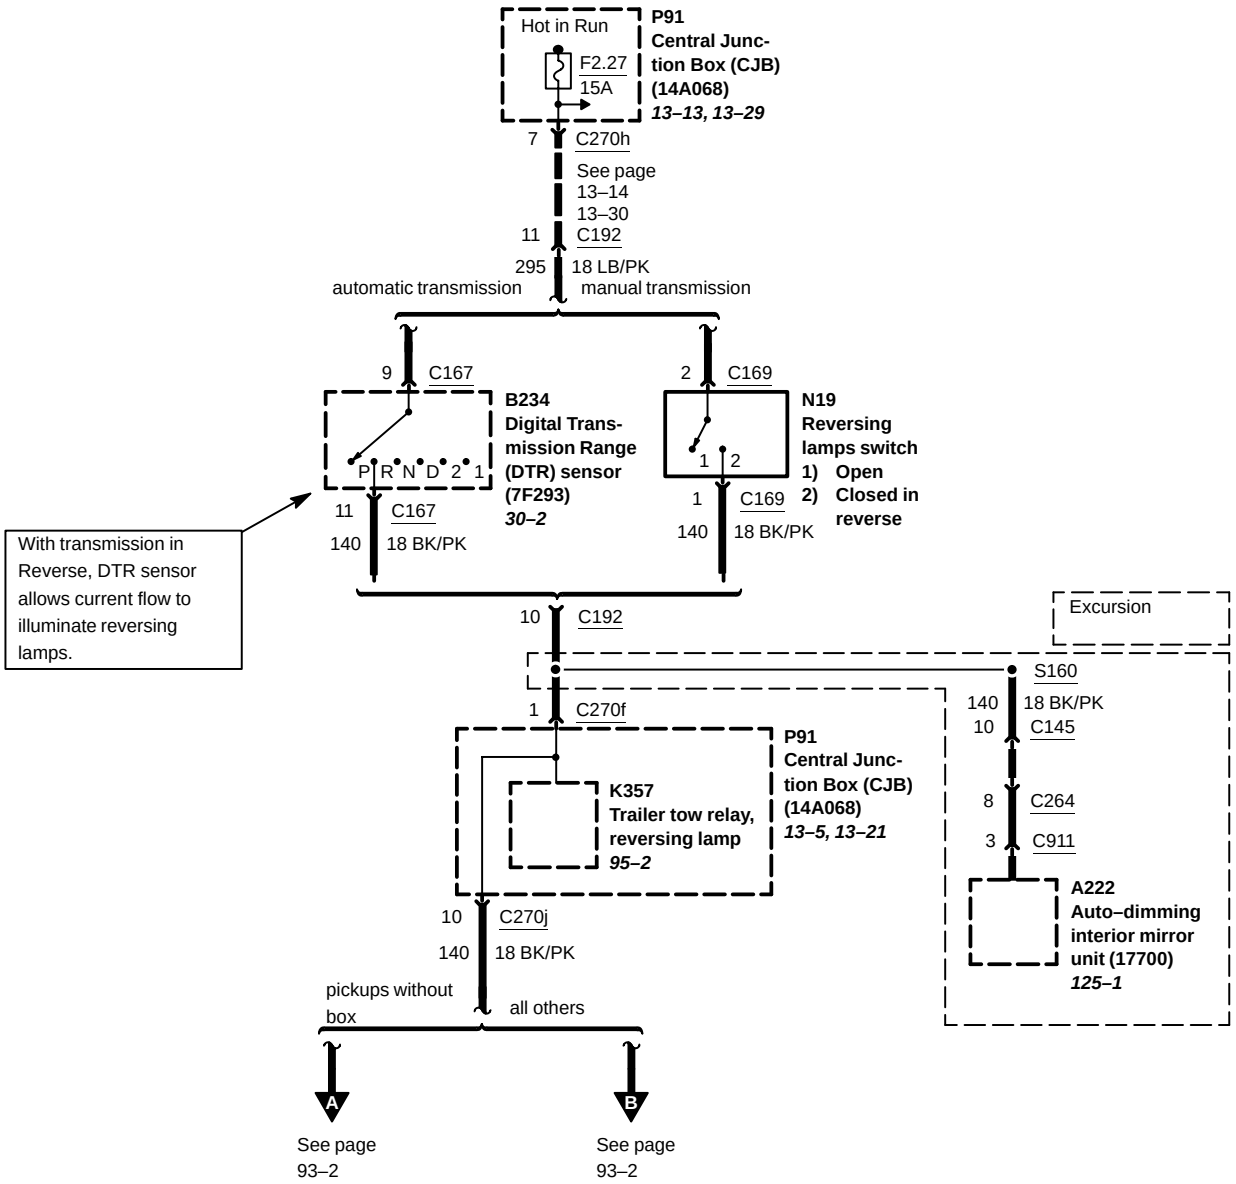
Hot in Run
F2.27
15A
P91
Central Junction Box (CJB)
(14A068)
13–13, 13–29
7
C270h
See page
13–14
13–30
11
C192
295
18 LB/PK
automatic transmission
manual transmission
9
C167
B234
Digital Transmission Range
(DTR) sensor
(7F293)
30–2
P R N D 2 1
11
C167
140
18 BK/PK
2
C169
N19
Reversing
lamps switch
1) Open
2) Closed in
reverse
1 2
1
C169
140
18 BK/PK
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
10
C192
Excursion
S160
1
C270f
140
18 BK/PK
10
C145
P91
Central Junction Box (CJB)
(14A068)
13–5, 13–21
K357
Trailer tow relay,
reversing lamp
95–2
8
C264
3
C911
A222
Auto–dimming
interior mirror
unit (17700)
125–1
10
C270j
140
18 BK/PK
pickups without box
all others
A
B
See page
93–2
See page
93–2