C1216

12A581

Charge air cooler pump relay

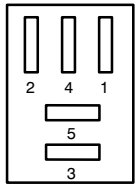

F05110

Pin	Circuit	Circuit function
1	369 (WH/OG)	Charge air cooler pump relay, control
2	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	18 (OG/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	17 (WH)	Charge air cooler pump relay, switched output

C1217 (BK)

12A581

Charge air cooler pump motor

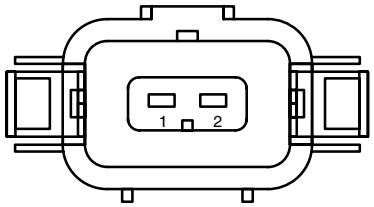

F02084

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	17 (WH)	Charge air cooler pump relay, switched output

C1218

* CNG
** Bi–Fuel

12B637

Fuel pump cutoff relay

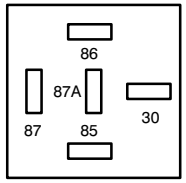

F05051

Pin	Circuit	Circuit function
30	*787 (PK/BK)	Fuel pump, Power
	**(WH)	Voltage supplied at all times (overload protected)
85	*16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
	**(WH)	Voltage supplied in Start and Run (overload protected)
86	*2109 (YE/LG)	Fuel pump cutoff relay, control
	**(WH)	Fuel pump cutoff relay, control
87	*–	not used
	**(WH)	Fuel pump cutoff relay, output
87A	*672 (LG/YE)	Fuel pump cutoff relay, output
	**(WH)	Fuel pump cutoff relay, output

C1219

12A581

Fuel pump high/low relay

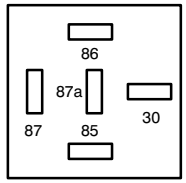

F05051

Pin	Circuit	Circuit function
30	922 (WH/RD)	Fuel pump, control
85	27 (OG/LG)	Fuel pump high/low relay, control
86	361 (RD)	Voltage supplied in Start and Run (overload protected)
87	–	not used
87a	57 (BK)	Ground