C3191

14C719

A224
Heated seat module, driver side front

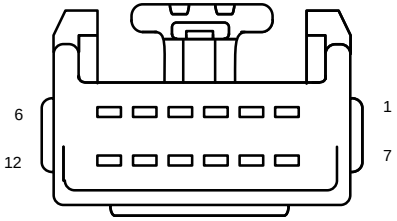

F12075

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
4	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
5	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
6	1064 (YE/LB)	Seat cushion heater, driver side, feed
7	1067 (VT/LB)	Seat cushion heater, driver side, return
8	581 (RD)	Heated seat switch, passenger side, input
9	–	not used
10	461 (OG)	Heated seat switch, passenger side, indicator
11	–	not used
12	175 (BK/YE)	Voltage supplied at all times (overload protected)

C3192

14C719

A223
Heated seat module, passenger side front

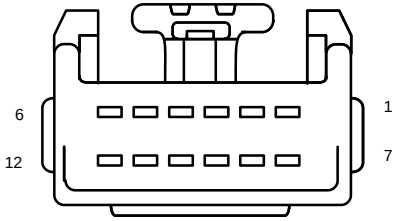

F12075

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
4	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
5	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
6	1064 (YE/LB)	Seat cushion heater, passenger side, feed
7	1067 (VT/LB)	Seat cushion heater, passenger side, return
8	581 (RD)	Heated seat switch, passenger side, input
9	–	not used
10	461 (OG)	Heated seat switch, passenger side, indicator
11	–	not used
12	175 (BK/YE)	Voltage supplied at all times (overload protected)

C3201

14K691

A459
Safety belt buckle pretensioner, driver

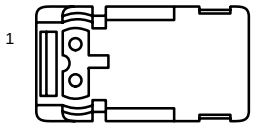

F02215

Pin	Circuit	Circuit function
1	1079 (LG/RD)	Safety belt buckle pretensioner, driver, feed
2	1080 (LG/BK)	Safety belt buckle pretensioner, driver, return