C220a

14401

A30
Instrument cluster

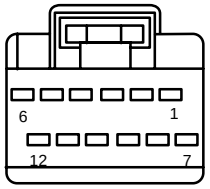

F12077

Pin	Circuit	Circuit function
1	914 (TN/OG)	SCP Bus +
2	915 (PK/LB)	SCP Bus –
3	3 (LG/WH)	Turn lamps, feed, left front
4	450 (DG/LG)	Safety belt indicator, feed
5	904 (LG/RD)	Generator/Battery indicator, control
6	–	not used
7	1216 (GY/OG)	RX, signal
8	1215 (WH/LG)	TX, signal
9	175 (BK/YE)	Instrument cluster, to, Rear window defrost switch (18578)
10	727 (YE/BK)	Rear window defrost relay, control
11	–	not used
12	608 (BK/YE)	Air bag indicator, control

C220b

14401

A30
Instrument cluster

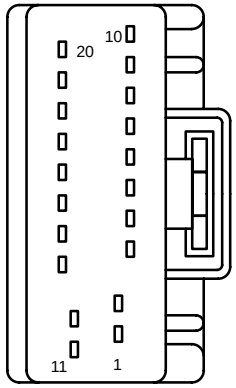

F20045

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	12 (LG/BK)	Power, Hot with High Beams on
3	2 (WH/LB)	Turn lamps, feed, right front
4	19 (LB/RD)	Instrument illumination, feed
5	–	not used
6	–	not used
7	–	not used
8	960 (BK/LB)	Traction assist On/Off indicator, to ABS control module
9	959 (GY)	Traction control switch, to, Instrument cluster
10	729 (RD/WH)	Voltage supplied at all times (overload protected)
11	489 (PK/BK)	Voltage, hot in run only
12	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)
13	–	not used
14	128 (VT/YE)	Brake indicator, control
15	603 (DG)	Anti–lock brake indicator, control
16	31 (WH/RD)	Engine oil pressure indicator, control
17	–	not used
18	–	not used
19	29 (YE/WH)	Fuel pump/fuel gauge sender
20	397 (BK/WH)	Ground