## C126 (BK)

**14A103**

H4
Second horn



F01035

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | QA02 (GN) | Horn relay, switched power |

## C127 (GY)

**14A103**

M219
Speed control actuator

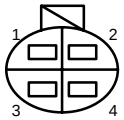

F04159

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | EJ06 (OG) | Vent solenoid |
| 2 | EJ15 (BN) | Vacuum pump motor |
| 3 | EJ04 (LB) | Vacuum pump motor |
| 4 | EJ16 (BN/YE) | Vacuum solenoid |

## C128 (BK)

**14A103**

H1
Horn (13832)



F01035

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | QA03 (GN) | Horn relay, switched power |

## C129 (BK)

**14A103**

N75
A/C compressor cycling switch (19E561)

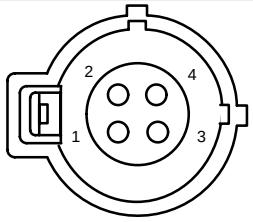

F04167

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | | not used |
| 2 | HA02 (BN/WH) | A/C demand signal |
| 3 | HA46 (BN) | A/C pressure switch, to A/C cycling switch |
| 4 | – | not used |

## C130 (BK)

**14A103**

E3
Turn lamp, left front



F03139

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | LBE4 (BK) | Ground |
| 2 | – | not used |
| 3 | LB14 (RD/GN) | Turn lamps, Left, switched power |

## C131 (BK)

**14A103**

E8
Turn lamp, right front



F03139

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | LBE3 (BK) | Ground |
| 2 | – | not used |
| 3 | LB13 (RD/WH) | Turn lamps, Right, switched power |